



# Erato

TV SOUNDBAR WITH  
WIRELESS SUB WOOFER



 **steljes**  
audio

 Bluetooth



# Erato

## TV SOUNDBAR WITH WIRELESS SUB WOOFER

### CONTENTS

Important Information .....	4
Wiring Information .....	6
Wall Mounting .....	8-9
Trouble Shooting .....	10-11
Hook Up Diagram .....	12-15
Controls and Function .....	16
Remote Control .....	17
Limited Warranty .....	18
Specifications .....	19



Beautifully engineered  
& designed in Great Britain

# IMPORTANT INFORMATION

## READ BEFORE OPERATING EQUIPMENT

Read all the instructions carefully before using the unit and keep them for future reference.

## SAFETY INSTRUCTIONS

- Do not use this product near water or moisture
- Do not install near any heat sources
- Clean only with a dry cloth. Unplug this product from the wall outlet
- Do not attempt to service this product yourself.
- Opening or removing covers may expose you to dangerous voltages or other hazards.
- Please contact the manufacturer to be referred to an authorized service center near you.
- Do not block any ventilation openings.
- To prevent risk of fire or electric shock, avoid over loading wall outlets,
- Do not let objects or liquids enter the product.
- Protect the power cord from being walked on or pinched, particularly at plugs and the point where they exit from the product.



### ATTENTION

The owner's manual contains important operating and maintenance instructions, for your safety, it is necessary to refer to the manual.



### DANGEROUS VOLTAGE

Conductor dangerous voltage, that may be of sufficient magnitude to constitute a risk of electric shock to persons is present within this product's enclosure.

## POWER SOURCES

- This audio system is designed to operate on 230 volts 50Hz, AC current. The main plug is used as the disconnect device and should remain readily accessible. To prevent electric shock, do not use the soundbar's mains cable with an extension cord, receptacle, or other outlet unless the blades and ground terminal can be fully inserted to prevent blade exposure. Never connect the audio system to 60 Hz DC, or anything other than the specified voltage.

## DISPOSAL

- In the EU, electronic devices cannot be disposed of with regular household waste. Please use the return or collections systems of the retailer from whom you purchased the soundbar. Please dispose of batteries in an environmentally friendly manner. Do not dispose of batteries with regular household waste. Please use the return or collections systems of the retailer from whom you purchased the soundbar.

## CAUTION

- Never remove the back covers of the soundbar as this can expose you to very high voltages and other hazards. If the system does not operate properly, unplug the audio system and call your authorised dealer or service centre for advice. Adjust only those controls that are covered in the instructions.

## WARNING

- To reduce the risk of fire or electric shock, do not expose this soundbar to rain or moisture.
- The system should not be exposed to dripping or splashing and objects filled with liquids, such as vases, should not be placed on the system.
- This soundbar should only be connected to a mains socket outlet with a protective earthing connection.

## ELECTRICAL INFORMATION


- This system is fitted with a BS1363/A 13 amp plug. If it is not suitable for your supply sockets it must be removed and replaced with an appropriate plug. If the plug becomes damaged and/or needs to be replaced please follow the wiring instructions below. The plug removed must be disposed of immediately. It must not be plugged into a supply socket as this will be an electrical hazard. If the fuse needs to be replaced it must be of the same rating and ASTA approved to BS1362. If the plug is changed, a fuse of the appropriate rating must be fitted in the plug, adapter or at the distribution board. If the fuse in a moulded plug is replaced, the fuse cover must be refitted before the appliance can be used.

 
# WIRING INSTRUCTIONS

Follow the appropriate wiring instructions given below.

In both cases ensure that the outer sheath of the cable is firmly held by the cable clamp.

## 2 - CORE PLUG


 This symbol indicates that this 2-core appliance is Class II and does not require an earth connection. The wire coloured blue must be connected to the terminal marked with the letter N or coloured black. The wire coloured brown must be connected to the terminal marked with the letter L or coloured red.

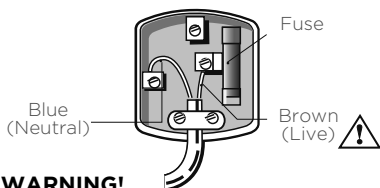


### WARNING!

Do not connect either wire to the earth terminal.

## 3 - CORE PLUG

 The wire coloured green and yellow must be connected to the terminal marked with the letter E, or by the earth symbol  or coloured green or green and yellow. The wire coloured blue must be connected to the terminal marked with the letter N or coloured black. The wire coloured brown must be connected to the terminal marked with the letter L or coloured red.

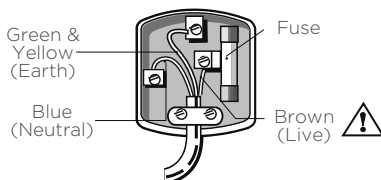

**WARNING!** This appliance must be earthed.

The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated “dangerous voltage” within the soundbar’s enclosure that may be of a sufficient magnitude to constitute a risk of electric shock.



## CAUTION

RISK OF ELECTRIC SHOCK DO NOT OPEN!



CAUTION: TO PREVENT ELECTRIC SHOCK DO NOT PLUG A CABLE INTO A WALL OUTLET, EXTENSION CORD, OR OTHER RECEPTACLE UNLESS THE METAL BLADES CAN BE FULLY INSERTED TO PREVENT BLADE EXPOSURE.

## KEY FEATURES

- The Erato TV Soundbar with Wireless Sub Woofer is designed to provide a high quality alternative to the loudspeakers in your flat-panel TV. To this end it has HDMI inputs, optical digital, analogue, and Bluetooth aptX inputs. The Bluetooth input allows you to stream music content direct from your mobile, laptop or tablet wirelessly, straight to the Erato. The Erato TV Soundbar with Wireless Sub Woofer is designed to mount either on a desktop or on a wall with the supplied wall mount fixings.
- The Erato TV Soundbar with Wireless Sub Woofer is suitable for use with any size of TV where its compact size and styling should unobtrusively complement your TV and the room décor.

## ADVANCED TECHNOLOGIES IN THE ERATO TV SOUND BAR

**Wider Sound Stage:** The Erato TV Soundbar features an acoustic design utilising 2x 2.5 inch base drivers, 2x 2.5 inch broadband drivers and 2x passive membranes. The dedicated wireless subwoofer utilises a 5 inch driver, paired with a high performance amplifier. It provides for 3x DSP presets of Movie, Music and Voice, each tailored to provide what we believe to be the best possible performance in each programme category.

- The inputs available on the Erato TV Soundbar should accommodate all TVs currently available, with 2x HDMI inputs and 1x HDMI output (with ARC), analogue (3.5mm stereo input), optical (Stereo) input and Bluetooth aptX (for wireless connectivity).



# WALL MOUNTING

- Determine how you want to set up your Erato TV Soundbar with Wireless Sub Woofer.
- The Erato TV Soundbar with Wireless Sub Woofer is supplied with wall fixings. The input jacks and power cord are designed to allow a flush mount.

 
## MOUNTING YOUR ERATO SOUND BAR

- Measure the width of the TV - the Erato TV Sound Bar should be mounted so it is centered with the TV. Divide the TV width measurement by 2 - that will be the centerline distance from the edges of the TV.
- If the Erato TV Sound Bar is to be mounted below the TV, measure from the TV edge to the centerline distance on the open wall below the TV. Mark an appropriate distance below the bottom of the TV.
- Make a mark 230 mm on each side of the centerline. Make sure the mark is the same distance down from the TV on each side.
- Drill a hole in the wall at either of the two marks.
- Hammer the 2 wall mount anchors into the holes - the anchors should be flush with the wall.
- Now, using a Phillips screwdriver, screw the wall screws into the anchors.
- Tilting the bottom of the Erato TV Sound Bar slightly away from the wall, guide the exposed screw heads into the matching holes on the back of Erato. The Erato TV Sound Bar is now securely wall mounted.

**Please note that the subwoofer is non-directional so it can be placed wherever is convenient, plugged into the appropriate mains power socket. Please keep the subwoofer within 30 feet/10 metres of the soundbar.**



# WALL MOUNTING DIAGRAM

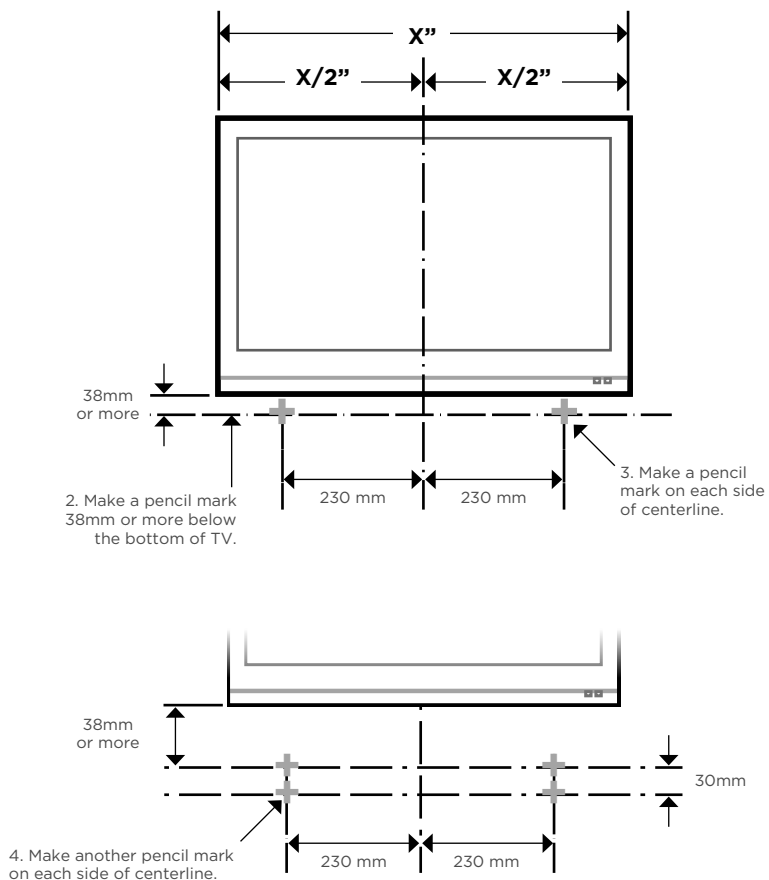

# TROUBLE SHOOTING

If you encounter problems when using the Erato TV Sound Bar, check the following points before requesting a service.

In order to keep the warranty valid, please DO NOT attempt to repair the system yourself.

**Note: due to EEC regulations this product will switch to standby mode as follows**

The Erato switches to standby mode in the following situation:

The device is idle for 30mins when powered by AC supply;

The L/R Audio in or 3.5mm jack is disconnected or when there is no input signal or the input signal is too low.

If using the 3.5mm jack input to Erato, we recommend to default the output volume at 75% or above on the external devices to ensure that it does not automatically go into standby mode.

## 1. No power

- Make sure power cords are securely connected to the AC output.
- Make sure that there is power at the AC output.
- Press the power button on the remote control or the front of the Erato .

## 2. No audio

- Press the Volume + (Up) button on the remote control or the front of the Erato.
- Make sure that you selected correct input (Input 1, Input 2, or Input 3).
- Press MUTE on the remote to make sure the Erato TV Sound Bar is not muted.
- Make sure audio cables are securely connected at the terminals of the Erato and the external devices.

### 3. Buzzing or humming noise

- Make sure audio cables are securely connected at the terminals of the Erato and the external devices.
- Test on an alternate device or replace the audio cable.
- Test the device and cable on an alternate input on the Erato.

### 4. The remote control is not functioning

- Aim the remote control directly at the sensor on the front of the Erato.
- Reduce the distance between the remote control and the Erato.
- Make sure that the battery is inserted with its polarities (+/- signs) aligned as indicated.
- Replace the battery.

### 5. The sound bar and remote are not responsive

 
- Unplug the power cord from the AC output, and plug back in after a few seconds.



# CONNECTION OPTIONS

## TV/DVD/Set Top Box Hookup - Option 1 HDMI ARC


HDMI with ARC - Use this output to connect your Erato to your TV. Please note if your TV is not ARC (Audio Return Channel) enabled you will not be able to connect this way - if this is the case, please refer to either case 2 or 3 below.

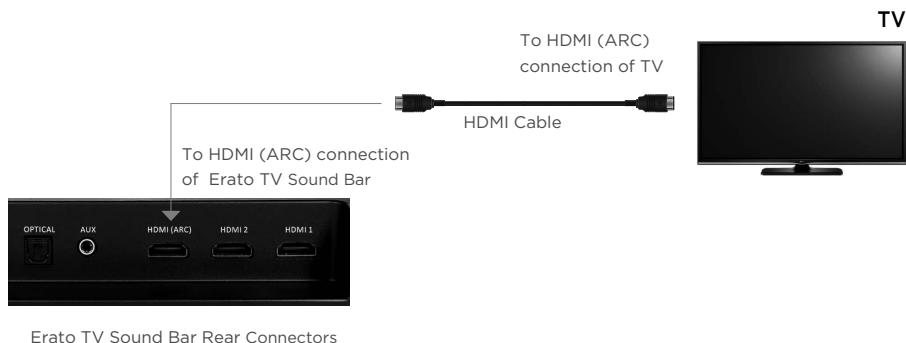

# CONNECTION OPTIONS

## TV/DVD/Set Top Box - Option 2 HDMI

 HDMI Inputs 1 & 2 - Use these inputs to connect any HDMI enabled device - you will also have to connect an HDMI lead via ARC to your TV as this will act as an output to stream video to your TV.

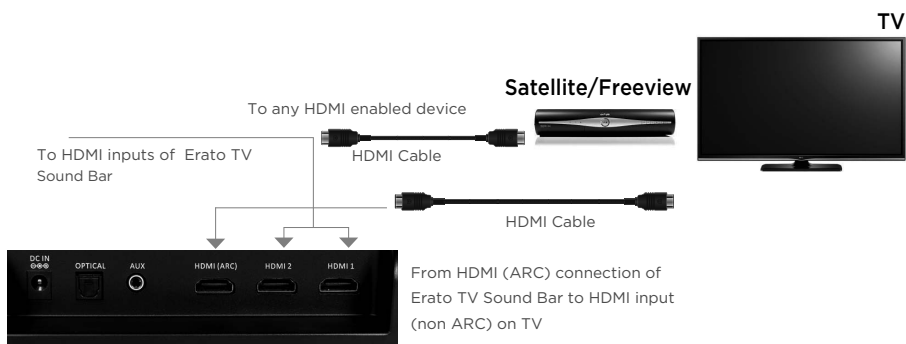


Erato TV Sound Bar Rear Connectors



# CONNECTION OPTIONS
 
## TV or Other Device Hookup - Option 3 Optical


Optical Input - Use this input to connect a TV (as above) or any other device such as a DVD or CD player or games console.

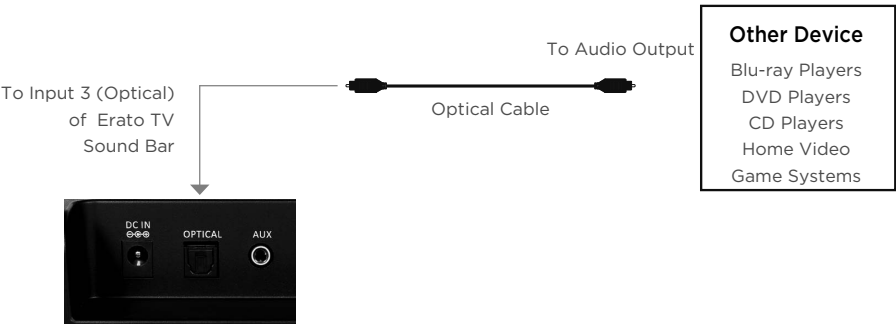

## CONNECTION OPTIONS

### TV Audio Hookup - Option 4 Auxiliary

 If your TV has a headphone output, plug a 3.5 mm mini stereo cable into the headphone output from your TV and plug the other end to the Input 2 jack on the back of your Erato.

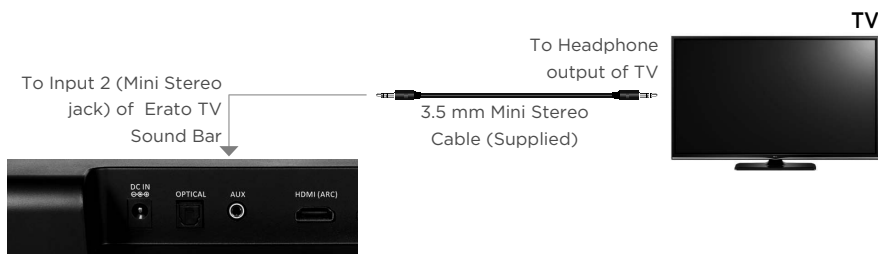

Erato TV Sound Bar Rear Connectors

### IMPORTANT SET UP NOTE

If you are using Option 3, you will need to change the output signal from the source device - this will be accessed in the sources menu and will need to be changed to either Stereo, 2.1 or PCM dependant on the terminology used in the source device.



# CONTROLS AND FUNCTIONS

## Front Panel Controls / LED Indicators

### 1. REMOTE CONTROL Sensor Area

Point your remote control at this area when you use the remote control.

### 2. POWER Button

The Erato TV Sound Bar goes to the standby mode. Press this button to turn the Erato TV Sound Bar on; this Power indicator will turn off to indicate the Erato TV Sound Bar is on. If the input becomes inactive the Erato TV Sound Bar will change to standby mode to conserve power and this indicator will illuminate.

### 3. VOLUME + Button

Adjust the main volume up respectively.

### 4. VOLUME - Button

 
Adjust the main volume down respectively.

### 5. Mode Button

Press this button to select DSP mode for Movies, Music or Voice.


### 6. SOURCE Button

Press this button to scroll through the inputs.

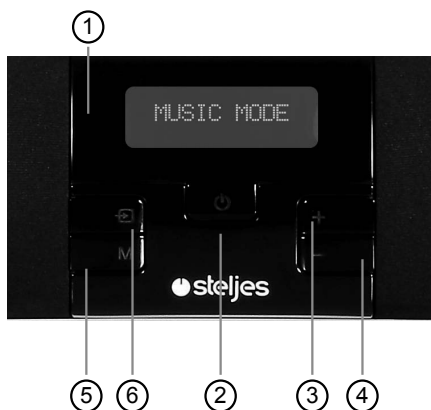



# REMOTE CONTROL

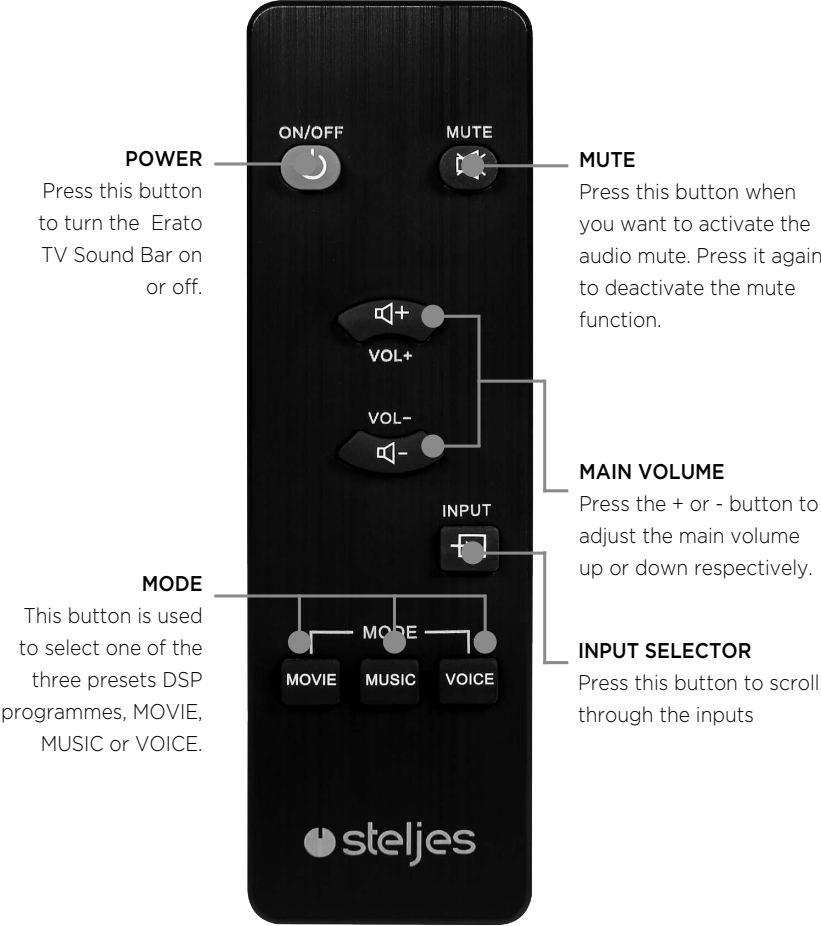 

**POWER**

Press this button to turn the Erato TV Sound Bar on or off.

**MUTE**

Press this button when you want to activate the audio mute. Press it again to deactivate the mute function.

**MAIN VOLUME**

Press the + or - button to adjust the main volume up or down respectively.

**INPUT SELECTOR**

Press this button to scroll through the inputs

**MODE**

This button is used to select one of the three presets DSP programmes, MOVIE, MUSIC or VOICE.

Remote Control

# LIMITED WARRANTY

## LIMITED WARRANTY

This product had been designed and manufactured to the highest quality standards; however, should you encounter any problems with this product please contact your local dealer or your country distributor.

This limited warranty is valid for the original owner for a period of one year from the date of purchase, it is not transferable.

### **What is covered by the limited warranty:**

The limited warranty covers all production and material defects of the product, except for the specifics stated below.

### **What is not covered by the limited warranty:**

Damage caused by packing and transport.

Defects caused by accidents, misuse, normal wear and tear, mis-maintenance, voltage variation and overloading.

Damage caused by incorrect installation or operation. Damage caused by modification or repair by a non-authorized service centre and use of non-original spare parts.

Other damage due to conditions beyond the supplier's control such as fire, rain, war and other force majeure events.

## **How to claim parts or repair under warranty:**

To have your product serviced under warranty, you must contact the dealer from whom the product was purchased.

You will need to produce this warranty booklet completed and stamped by your dealer on the date of purchase.

Alternatively, you will need the original sales invoice or other proof of ownership and date of purchase.

The supplier is liable only to repair or replace defective parts of products and the supplier is not responsible for indirect losses or damage arising from the use of the product.

Transportation costs for servicing are not covered by the warranty.

A service repair or replacement cannot exceed the value of the product under warranty; in no event shall the supplier be responsible or liable for special, incidental, consequential or indirect damage.

## SPECIFICATIONS

Steljes Erato TV Soundbar with Wireless Sub Woofer

2 x 2.75 Inch Mid Range Ferrite Magnet Drivers

2 x 2 Inch High Frequency Neodymium Driver

5 Inch Low Frequency Ferrite Magnet (Sub Woofer)

HDMI in x 2, HDMI ARC x 1

Analogue 3.5mm Stereo Jack In

Optical In

Bluetooth aptX A2DP

Wall Mount Kit Supplied

90W Power Output

3 DSP Settings

Class D Amplifiers

BAR - 89 x 850 x 80mm (H x W x D)

 
SUB - 290 x 280 x 180mm (H x W x D)

## SERVICE & SUPPORT

Please contact your local authorised dealer or reseller.

Email: [info@steljesaudio.co.uk](mailto:info@steljesaudio.co.uk)

All information contained in this guide herein may change without notice and is provided on an "AS IS" basis, without warranties of any kind. Steljes Audio reserves the right to change specifications without notice. Images and Photos are for illustration only and actual product may vary. E&OE.

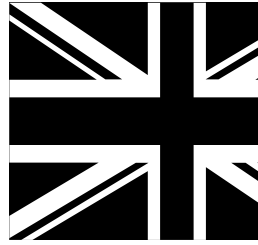

[www.steljesaudio.co.uk](http://www.steljesaudio.co.uk)