


**F90-W13**

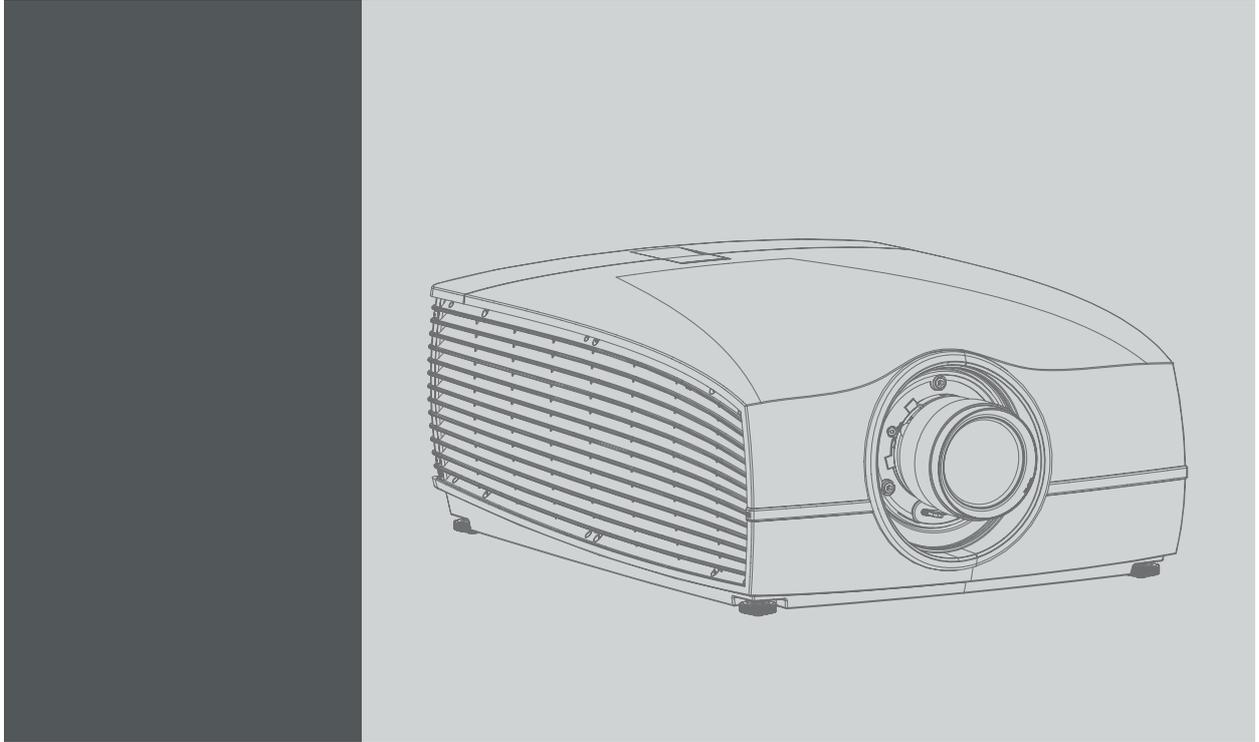

**User Manual**

**Barco Fredrikstad AS**

Habornveien 53, N-1630 Gamle Fredrikstad, Norway

Phone: +47 6930 4550

Fax: +47 6930 4580

Support: [Support.fre@barco.com](mailto:Support.fre@barco.com)

Visit us at the web: [www.barco.com](http://www.barco.com)

## Changes

Barco provides this manual 'as is' without warranty of any kind, either expressed or implied, including but not limited to the implied warranties or merchantability and fitness for a particular purpose. Barco may make improvements and/or changes to the product(s) and/or the program(s) described in this publication at any time without notice.

This publication could contain technical inaccuracies or typographical errors. Changes are periodically made to the information in this publication; these changes are incorporated in new editions of this publication.

The latest edition of Barco manuals can be downloaded from the Barco web site [www.barco.com](http://www.barco.com) or from the secured Barco web site <https://www.barco.com/en/signin>.

## Federal Communications Commission (FCC Statement)

This equipment has been tested and found to comply with the limits for a class A digital device, pursuant to Part 15 of the FCC rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instruction manual, may cause harmful interference to radio communications. Operation of this equipment in a residential area may cause harmful interference, in which case the user will be responsible for correcting any interference at his own expense.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

## Trademarks

Brand and product names mentioned in this manual may be trademarks, registered trademarks or copyrights of their respective holders. All brand and product names mentioned in this manual serve as comments or examples and are not to be understood as advertising for the products or their manufacturers.

## Turkey RoHS compliance



■ Türkiye Cumhuriyeti: AEEE Yönetmeliğine Uygundur.

[Republic of Turkey: In conformity with the WEEE Regulation]

## Disposal Information

Waste Electrical and Electronic Equipment



■ This symbol on the product indicates that, under the European Directive 2012/19/EU governing waste from electrical and electronic equipment, this product must not be disposed of with other municipal waste. Please dispose of your waste equipment by handing it over to a designated collection point for the recycling of waste electrical and electronic equipment. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate these items from other types of waste and recycle them responsibly to promote the sustainable reuse of material resources.

For more information about recycling of this product, please contact your local city office or your municipal waste disposal service.

For details, please visit the Barco website at: <http://www.barco.com/en/AboutBarco/weee>

## Disposal of batteries in the product



■ This product contains batteries covered by the Directive 2006/66/EC which must be collected and disposed of separately from municipal waste.

If the battery contains more than the specified values of lead (Pb), mercury (Hg) or cadmium (Cd), these chemical symbols will appear below the crossed-out wheeled bin symbol.

By participating in separate collection of batteries, you will help to ensure proper disposal and to prevent potential negative effects on the environment and human health.

## **Guarantee and Compensation**

Barco provides a guarantee relating to perfect manufacturing as part of the legally stipulated terms of guarantee. On receipt, the purchaser must immediately inspect all delivered goods for damage incurred during transport, as well as for material and manufacturing faults Barco must be informed immediately in writing of any complaints.

The period of guarantee begins on the date of transfer of risks, in the case of special systems and software on the date of commissioning, at latest 30 days after the transfer of risks. In the event of justified notice of complaint, Barco can repair the fault or provide a replacement at its own discretion within an appropriate period. If this measure proves to be impossible or unsuccessful, the purchaser can demand a reduction in the purchase price or cancellation of the contract. All other claims, in particular those relating to compensation for direct or indirect damage, and also damage attributed to the operation of software as well as to other services provided by Barco, being a component of the system or independent service, will be deemed invalid provided the damage is not proven to be attributed to the absence of properties guaranteed in writing or due to the intent or gross negligence or part of Barco.

If the purchaser or a third party carries out modifications or repairs on goods delivered by Barco, or if the goods are handled incorrectly, in particular if the systems are operated incorrectly or if, after the transfer of risks, the goods are subject to influences not agreed upon in the contract, all guarantee claims of the purchaser will be rendered invalid. Not included in the guarantee coverage are system failures which are attributed to programs or special electronic circuitry provided by the purchaser, e.g. interfaces. Normal wear as well as normal maintenance are not subject to the guarantee provided by Barco either.

The environmental conditions as well as the servicing and maintenance regulations specified in this manual must be complied with by the customer.

## **Copyright ©**

All rights reserved. No part of this document may be copied, reproduced or translated. It shall not otherwise be recorded, transmitted or stored in a retrieval system without the prior written consent of Barco.

# TABLE OF CONTENTS

<b>1. Safety</b>	<b>3</b>
1.1 General considerations	3
1.2 Important safety instructions	4
1.3 Remote control warning	6
1.4 Projector Hazard Distances	7
1.5 High Brightness Precautions	7
1.6 Hazard Distance for fully closed projection system	8
1.7 HD in function of the lens Throw Ratio (TR)	9
1.8 Safety symbols	10
1.9 RoHS compliance	11
<b>2. Getting to know the projector</b>	<b>13</b>
2.1 Main components	13
2.2 Service and maintenance	14
2.3 LED status light	14
2.4 LCD panel	14
2.5 Local keypad	15
2.6 Wireless remote control	15
2.7 Connector panel	16
2.8 Color Wheels	17
2.8.1 Color Wheel range	17
2.8.2 Change the color wheel	17
2.9 Optional accessories	18
<b>3. Lenses</b>	<b>19</b>
3.1 Approved Lenses	19
3.2 Lens range	19
3.3 Replace a lens	21
3.4 Adjust zoom, focus and iris	23
<b>4. Physical installation</b>	<b>25</b>
4.1 Installation process	25
4.2 Installation conditions	25
4.3 Initial inspection	27
4.4 Positioning the projector	28
4.5 Mounting the projector	28
4.6 Throw distance	29
4.7 Scheimpflug (Boresight) adjustment	32
4.8 Scheimpflug adjustment procedure	33
<b>5. Getting started</b>	<b>35</b>
5.1 Projector source and control connections	35
5.1.1 Making connections	35
5.1.2 Connector specifications	35
5.1.2.1 Single link DVI	35
5.1.2.2 Display Port 1.2	36
5.1.2.3 HDMI 1.4 (No 3D functionality)	36
5.1.2.4 3G-SDI	36
5.1.2.5 HDBase T	37
5.1.3 Control interfaces	37
5.1.3.1 RS-232	37
5.1.3.2 LAN/Ethernet	38
5.1.3.3 USB-A port	38
5.2 Power up the projector	38
5.3 Power down the projector	38
5.4 Power modes	38
5.5 Customize projector settings	39
5.6 User interface	39
5.6.1 On Screen Display (OSD)	39
<b>6. Source menu</b>	<b>41</b>
6.1 Connector selection	41
6.2 Source configure	41
<b>7. Image menu</b>	<b>43</b>
7.1 Contrast	43
7.2 Brightness	43
7.3 Saturation	43
7.4 Advanced image adjustments	43
<b>8. Installation menu</b>	<b>45</b>
8.1 Lens	45
8.2 Orientation	45

Table of contents

---

8.3	Warp .....	46
8.4	Illumination.....	46
<b>9.</b>	<b>Settings menu.....</b>	<b>47</b>
9.1	Communication .....	47
9.2	Apply a menu theme .....	47
9.3	Service .....	47
<b>10.</b>	<b>Status menu .....</b>	<b>49</b>
10.1	Source status .....	49
10.2	Product.....	49
10.3	Illumination.....	49
10.4	Communication.....	49
<b>11.</b>	<b>Reset Menu .....</b>	<b>51</b>
11.1	Factory Reset.....	51
11.2	Selectable Reset .....	51
<b>12.</b>	<b>Cleaning the projector.....</b>	<b>53</b>
12.1	Projector lenses .....	53
12.2	Projector cabinet.....	53
12.3	Filters .....	53

# 1. SAFETY

## About this chapter

Read this chapter thoroughly before attempting to install or operate the projector.

To prevent personal injury to users or physical damage to the projector while installing and using your projector, ensure that you understand and follow all safety guidelines, instructions and warnings included in this chapter and this manual.

## Clarification of the term 'F90-series' used in this document

Use in this document of the term, 'F90-series', means that the content is applicable for the following products:

- F90–W13
- F90–4K13

## Overview

- General considerations
- Important safety instructions
- Remote control warning
- Projector Hazard Distances
- High Brightness Precautions
- Hazard Distance for fully closed projection system
- HD in function of the lens Throw Ratio (TR)
- Safety symbols
- RoHS compliance

## 1.1 General considerations

### Notice on optical radiation

- The projector is Class 1 laser product that conforms with IEC EN 60825-1:2014. For Northern America, the projector is class 3R laser product up to throw ratio 2.33. The projector conforms with IEC 60825-1:2007, 21 CFR 1040.10 and 1040.11 except for deviations pursuant to Laser Notice No 50 dated June 24.  
Do not stare into Beam.
- This projector is Risk Group 2 (RG2) according to IEC EN 62471-5.  
This projector may become Risk Group 3 (RG3) when an interchangeable lens with throw ratio greater than 3.15 is installed.  
For Northern America, installation requirements according to Risk group 3 (RG3) must be followed when interchangeable lens with throw ratio greater than 2.33 is installed.  
Refer to the manual for the lens list and throw ratio before operation.  
Such combination of projector and lens are intended for **professional use only**, and are not intended for consumer use.
- For RG3, no direct exposure to the beam shall be permitted.  
For RG3, operators shall control access to the beam within the hazard distance or install the product at a height that will prevent eye exposure within the hazard distance.
- This projector has two (2) built-in Class 4 laser clusters. Disassembly or modification is very dangerous and should never be attempted.
- Any operation or adjustment not specifically instructed by the user's guide creates the risk of hazardous laser radiation exposure.
- Do not open or disassemble the projector as this may cause damage by the exposure of laser radiation.

### General safety instructions

- This product contains no user serviceable parts except the Color Wheel. Attempts to modify/replace mechanics or electronics inside the housing or compartments will violate any warranties and may be hazardous.  
Do not remove/replace any other parts than the Color Wheel. Other parts, service personnel only – Warranty void if Removed.  
Follow the instructions in the User Guide to replace the Color Wheel.
- Do not stare into beam when the projector is on. The bright light may result in permanent eye damage.
- Not following the prescribed control, adjustment or operation procedure may cause damage by the exposure of laser radiation.
- Before operating this equipment please read this manual thoroughly and retain it for future reference.
- Installation and preliminary adjustments should be performed by properly trained and qualified personnel.
- All warnings on the projector and in the documentation manuals must be adhered to.
- All instructions for operating and use of this equipment must be followed precisely.
- All local installation codes should be adhered to.

### Notice on safety

This equipment is built in accordance with the requirements of the international safety standards IEC60950-1, as basis for National safety regulation world wide. The safety standard covers information technology equipment including electrical business equipment intended to operate in "normal" environments (offices and homes). This safety standard imposes important requirements on the use of safety critical components, materials and insulation, in order to protect the user or operator against risk of electric shock and energy hazard and having access to live parts. Safety standards also impose limits to the internal and external temperature rises, radiation levels, mechanical stability and strength, enclosure construction and protection against the risk of fire. Simulated single fault condition testing reduce the risk of hazards and contribute to ensure the safety of the equipment to the user even when the equipment's normal operation fails.

### Users definition

Throughout this manual, the term SERVICE PERSONNEL refers to Barco authorized persons having appropriate technical training and experience necessary to be knowledgeable of potential hazards to which they are exposed (including, but not limited to HIGH VOLTAGE ELECTRIC and ELECTRONIC CIRCUITRY and HIGH BRIGHTNESS PROJECTORS) in performing a task, and of measures to minimize the potential risk to themselves or other persons. Only Barco authorized SERVICE PERSONNEL, knowledgeable of such risks, are allowed to perform service functions inside the product enclosure. The term USER and OPERATOR refers to any person other than SERVICE PERSONNEL. When an interchangeable lens with throw ratio 3.15 or more is installed, the F90-series projector becomes RG3. Refer to the manual for the lens list and hazard distance before operation. Such combination of projector and lens are intended for professional use only, and are not intended for consumer use.

FOR PROFESSIONAL USE ONLY means installation can only be carried out by Barco AUTHORIZED PERSONNEL familiar with potential hazards associated with high intensity light beams.

## 1.2 Important safety instructions

---

### To prevent the risk of electrical shock

- This product should be operated from a mono phase AC power source.
- This apparatus must be grounded (earthed) via the supplied 3 conductor AC power cable. If none of the supplied power cables are the correct one, consult your dealer.  
If you are unable to insert the plug into the outlet, contact your electrician to replace your obsolete outlet. Do not defeat the purpose of the grounding-type plug.  
Never use 2-prong power cords, as this is dangerous and could lead to electrical shock.
- Do not allow anything to rest on the power cord. Do not locate this product where persons will walk on the cord. To disconnect the cord, pull it out by the plug. Never pull the cord itself.
- Use only the power cord supplied with your device or original replacement cords. While appearing to be similar, other power cords have not been safety tested at the factory and may not be used to power the device. For a replacement power cord, contact your dealer.
- Do not operate the projector with a damaged cord. Replace the cord.  
Do not operate the projector if the projector has been dropped or damaged - until it has been examined and approved for operation by a qualified service technician.
- Position the cord so that it will not be tripped over, pulled, or contact hot surfaces.
- If an extension cord is necessary, a cord with a current rating at least equal to that of the projector should be used. A cord rated for less amperage than the projector may overheat.
- Never push objects of any kind into this product through cabinet slots as they may touch dangerous voltage points or short out parts that could result in a risk of fire or electrical shock.
- Make sure that no objects enter into the vents and openings of the set.
- Do not expose this projector to rain or moisture.
- The projector is designed for indoor use only. Never operate the unit outdoors.
- Do not immerse or expose this projector in water or other liquids.
- Do not spill liquid of any kind on this projector.
- Should any liquid or solid object fall into the cabinet, unplug the set and have it checked by qualified service personnel before resuming operations.
- Do not disassemble this projector, always take it to an authorized trained service person when service or repair work is required.
- Do not use an accessory attachment which is not recommended by the manufacturer.
- Lightning - For added protection for this video product during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet. This will prevent damage to the device due to lightning and AC power-line surges.

### To prevent personal injury

- To prevent injury and physical damage, always read this manual and all labels on the system before connecting to the wall outlet or adjusting the projector.
- To prevent injury, take note of the weight of the projector.
- To prevent injury, ensure that the lens and all covers are correctly installed. See installation procedures.
- Warning: high intensity light beam. NEVER look into the lens! High luminance could result in damage to the eye.
- Warning: extremely high brightness laser: This projector uses extremely high brightness laser. Never attempt to look directly into the lens or at the laser.
- Always switch off the projector and disconnect from the mains power supply before attempting to remove any of the projector covers or access parts inside the projector.
- This product contains no user serviceable parts except the Color Wheel. Attempts to modify/replace mechanics or electronics inside the housing or compartments will violate any warranties and may be hazardous.
- Do not remove/replace any other parts than the Color Wheel. Other parts, service personnel only Warranty void if removed
- Do not place this equipment on an unstable cart, stand, or table. The product may fall, causing serious damage to it and possible injury to the user.
- Only place the projector on a stable surface, or mount it securely using an approved ceiling-mount.
- It is hazardous to operate without lens or lens cap. Lenses or shields shall be changed if they have become visibly damaged, for example with cracks or deep scratches, to such an extent that their effectiveness is impaired.

### To prevent fire hazard

- Barco projection products are designed and manufactured to meet the most stringent safety regulations. This projector radiates heat on its external surfaces and from ventilation ducts during normal operation, which is both normal and safe. Exposing flammable or combustible materials into close proximity of this projector could result in the spontaneous ignition of that material, resulting in a fire. For this reason, it is absolutely necessary to leave an "exclusion zone" around all external surfaces of the projector whereby no flammable or combustible materials are present. The exclusion zone in the exhaust area must be not less than 100 cm (40"). The exclusion zone on the intake area must not be less than 50 cm (20").
- Do not place flammable or combustible materials near the projector!
- The exclusion zone on lens side must be at least 1m.
- Caution! Hot air is exhausted from the rear vent. Do not place objects that are sensitive to heat nearer than 100 cm (40") to the exhaust vent.
- Slots and openings in this equipment are provided for ventilation. To ensure reliable operation of the projector and to protect it from overheating, these openings must not be blocked or covered.
- The openings should never be blocked by placing the projector too close to walls, or other similar surface. Allow for sufficient distance to walls and ceilings to avoid overheating. Minimum safety distance to the exhaust area of the unit must not be less than 100 cm (40") and to the intake area, not less than 50 cm (20").
- This projector should never be placed near or over a radiator or heat register.
- This projector should not be placed in a built-in installation or enclosure unless proper ventilation is provided.
- Do not cover the projector or the lens with any material while the projector is in operation. Keep flammable and combustible materials away from the projector at all times.
- Mount the projector in a well-ventilated area away from sources of ignition and out of direct sun light. Always allow ample airflow through the projector.
- Never expose the projector to rain or moisture. In the event of fire, use sand, CO2 or dry powder fire extinguishers.
- Never use water on an electrical fire.
- Always have service performed on this projector by authorized Barco service personnel. Always insist on genuine Barco replacement parts. Never use non-Barco replacement parts as they may degrade the safety of this projector.
- Projection rooms must be well ventilated or cooled in order to avoid heat buildup.
- Let the projector cool down completely before storing. Remove cord from the projector when storing.

### To prevent projector damage

- To ensure correct airflow is maintained the projector should only be operated when all of its covers in place.
- Always remove lens cap before switching on the projector. If the lens cap is not removed, it may melt due to the high energy light emitted through the lens. Melting the lens cap may permanently damage the surface of the projection lens
- Only connect the projector to signal sources and voltages as described in the technical specification. Connecting to unspecified signal sources or voltages may lead to malfunction and permanent damage of the unit.
- To ensure correct airflow is maintained, it should only be operated when all of its covers are in place.
- The projector must always be installed in a manner which ensures free flow of air into its air inlets and unimpeded evacuation of the hot air from its cooling system.
- Slots and openings in the cabinet are provided for ventilation. To ensure reliable operation of the product and to protect it from overheating, these openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surface. This product should never be placed near or over a radiator or heat register. The device should not be placed in a built-in installation or enclosure unless proper ventilation is provided. Ensure that nothing can be spilled on, or dropped inside the projector. If this does happen, switch off and unplug the mains supply immediately. Do not operate the projector again until it has been checked by Barco authorized service personnel.

## 1. Safety

---

- Do not block the projector cooling fans or free air movement around the projector. Minimum safety distance to the exhaust area of the unit must not be less than 100 cm (40") and to the intake area, not less than 50 cm (20").
- Do not use this equipment near water.
- Do not operate the projector outside its temperature and humidity specifications as this may result in overheating and malfunction.
- Never place the projector in direct sun light. Sun light on the lens can severely damage the Digital Mirror Devices™ in which case there is a loss of warranty.
- Save the original shipping carton and packing material. They will come in handy if you ever have to ship your equipment. For maximum protection, repack your set as it was originally packed at the factory.
- Unplug this product from the wall outlet before cleaning. Do not use liquid cleaners or aerosol cleaners. Use a damp cloth for cleaning. Never use strong solvents, such as thinner or benzine, or abrasive cleaners, since these will damage the cabinet. Stubborn stains may be removed with a cloth lightly dampened with mild detergent solution.
- To ensure the highest optical performance and resolution, the projection lenses are specially treated with an anti-reflective coating, therefore, avoid touching the lens. To remove dust on the lens, use a soft dry cloth. Do not use a damp cloth, detergent solution, or thinner.

### On servicing

- Do not attempt to service this product yourself, as opening or removing covers may expose you to dangerous voltage potentials and risk of electric shock.
- Refer all servicing to Barco authorized repair centers.
- Attempts to alter the factory-set internal controls or to change other control settings not specially discussed in this manual can lead to permanent damage to the projector and cancellation of the warranty.
- Unplug this product from the wall outlet and refer servicing to Barco authorized service personnel or technicians under the following conditions:
  - If liquid has been spilled into the equipment.
  - If the product has been exposed to rain or water.
  - If the product does not operate normally when the operating instructions are followed. Adjust only those controls that are covered by the operating instructions since improper adjustment of the other controls may result in damage and will often require extensive work by a qualified technician to restore the product to normal operation.
  - If the product has been dropped or the cabinet has been damaged.
  - If the product exhibits a distinct change in performance, indicating a need for service.
  - When the power cord or plug is damaged or frayed.
- Replacement parts: When replacement parts are required, be sure the service technician has used original Barco replacement parts. Unauthorized substitutions may result in degraded performance and reliability, fire, electric shock or other hazards. Unauthorized substitutions may void warranty.
- Safety check: Upon completion of any service or repairs to this projector, ask the service technician to perform safety checks to determine that the product is in proper operating condition.

## 1.3 Remote control warning

---

### General

Laser radiation class II product, wavelength 670 nm; maximum output 1 mW.

Remote control complies with applicable requirements of 21 CFR 1040.10 and 1040.11

Remote control complies with applicable requirements of EN / IEC 60825–1/2007.



Image 1-1

## 1.4 Projector Hazard Distances

### WARNING. This may be a RG3 laser Product, dependent on which lens used.

This projector may become Risk Group 3 (RG3) when an interchangeable lens with throw ratio greater than 3.15 is installed. For Northern America, installation requirements according to Risk group 3 (RG3) must be followed when interchangeable lens with throw ratio greater than 2.33 is installed

Refer to the manual for the lens list and throw ratio before operation.

Do not look direct in to the beam from the projector lens.

No direct eye exposure to the beam is permitted.

Operators shall control access to the beam within the hazard distance or install the product at a height that will prevent eye exposure within the hazard distance".

See table below for a definition of hazardous distances versus the throw ratio of the lens.

## 1.5 High Brightness Precautions

### Restriction Zone (RZ) based on the HD (Hazard Distance).

The HD depends on the amount of lumens produced by the projector and the type of lens installed. See next chapter "HD in function of the lens Throw Ratio (TR)", page 8 .

To protect untrained end users (as cinema visitors) the installation shall comply with the following installation requirements: Operators shall control access to the beam within the hazard distance or install the product at the height that will prevent spectators' eyes from being in the hazard distance. Radiation levels in excess of the limits will not be permitted at any point less than 2.0 meter (SH) above any surface upon which persons other than operators, performers, or employees are permitted to stand or less than 1.0 meter (SH) lateral separation from any place where such persons are permitted to be. In non-cinema environments where unrestrained behavior is reasonably foreseeable, the minimum separation height should be greater than or equal to 3.0 meter to prevent potential exposure, for example by an individual sitting on another individual's shoulders, within the HD.

These values are minimum values and are based on the guidance provided in IEC 62471-5:2015 section 6.6.5.

The end user must understand the risk and apply protective measures based upon the hazard distance as indicated on the label and in the user information. Installation method, barriers, detection system or other applicable control measure shall prevent hazardous eye access to the radiation within the hazard distance.

For example, projectors that have a HD greater than 1 m and emit light into an uncontrolled area where persons may be present should be positioned in accordance with "the fixed projector installation" parameters, resulting in a HD that does not extend into the audience area unless the beam is at least 2.0 meter above the floor level. In non-cinema environments where unrestrained behavior is reasonably foreseeable, the minimum separation height should be greater than or equal to 3.0 meter to prevent potential exposure, for example by an individual sitting on another individual's shoulders, within the HD. For example, a sufficiently large separation height may be achieved by mounting the image projector on the ceiling or through the use of physical barriers.

For applications installed in the USA market the above limits do not apply. The relevant minimum separation height is 2.5 meter (8.2 ft) and the separation width is defined as 1.0 meter (3.3 ft) by the FDA CDRH.

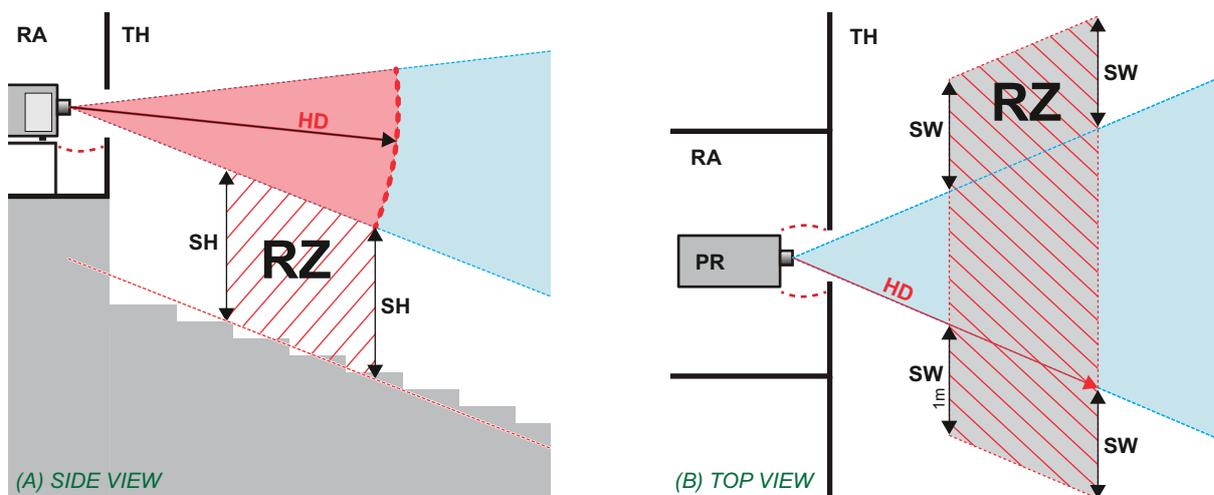


Image 1-2  
 A Side View  
 B Top View  
 RA Restricted Area  
 PR Projector  
 TH Theater  
 RZ Restriction Zone in the theater  
 SH Separation Height  
 SW Separation Width



**Regarding the SH Distance: For Cinema applications, the distance must be >2m. For Concert applications, the distance must be >3m.**

Based on national requirements, no person is allowed to enter the projected beam within the zone between the projection lens and the related hazard distance (HD). This shall be physically impossible by creating sufficient separation height or by placing barriers. The minimum separation height takes into account the surface upon which persons other than operator, performers or employees are permitted to stand.

On image 1-2 a typical setup is displayed. It must be verified if these minimum requirements are met. If required a restricted zone (RZ) in the theater must be established. This can be done by using physical barrier, like a red rope as illustrated in image 1-2.

The restricted area sticker can be replaced by a sticker with only the symbol.

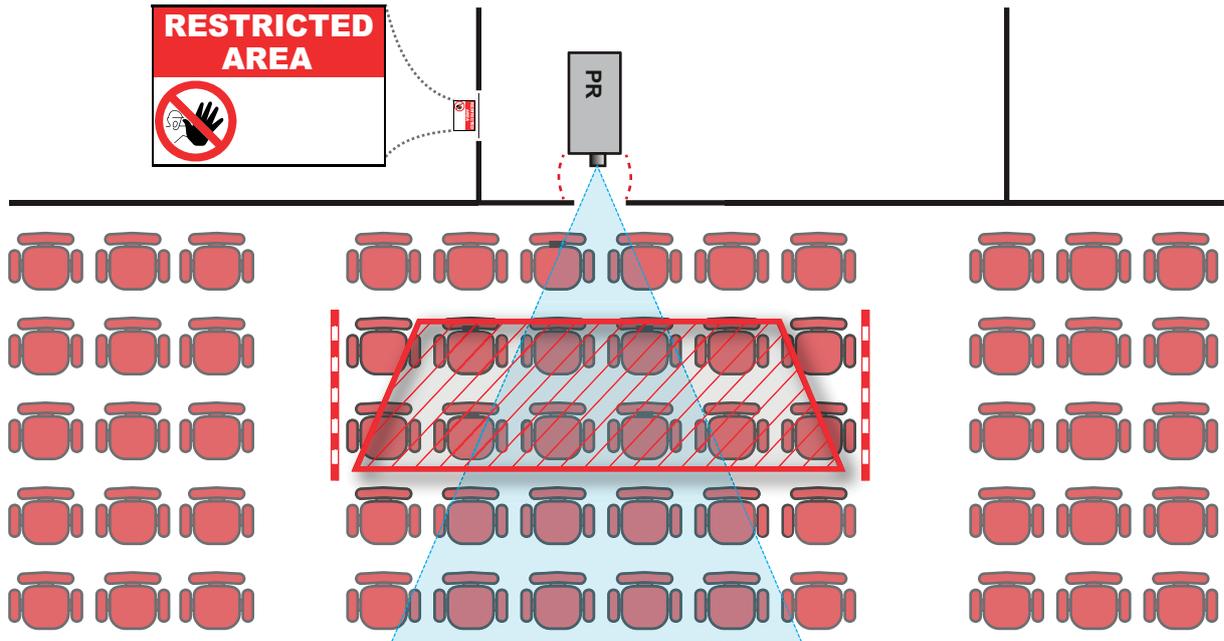


Image 1-3

## 1.6 Hazard Distance for fully closed projection system



### HD

Hazard Distance (HD) is the distance measured from the projection lens at which the intensity or the energy per surface unit becomes lower than the applicable exposure limit on the cornea or on the skin. The light beam is considered (to be) unsafe for exposure if the distance from a person to the light source is less than the HD.

### Restriction Zone RZ Based on the HD

The projector is also suitable for rear projection applications; projecting a beam onto a diffuse coated projection screen. As displayed in image 1-3 two areas should be considered: the restricted enclosed projection area (RA) and the observation area (TH).

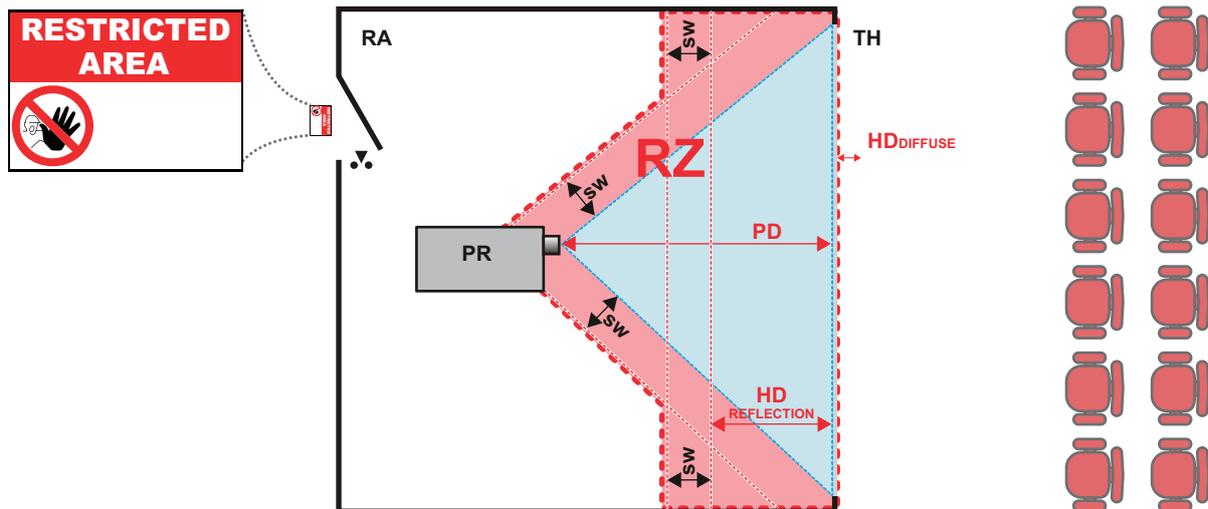


Image 1-4

RA Restricted Access location (Enclosed projection area)  
 PR Projector.  
 TH Theater (observation area).  
 RZ Restriction Zone  
 PD Projection Distan  
 SW Separation Width. Must be minimum 1 meter.

### Restriction zone (RZ) based on the HD continued.

For this type of setup 3 different HD shall be considered:

- HD as discussed in "High Brightness precautions: Hazard Distance (HD)", page 6 , relevant for intrabeam exposure.
- HDreflection : the distance that has to be kept restrictive related to the reflected light from the rear projection screen.
- HDdiffuse : the relevant distance to be considered while observing the defuse surface of the rear projection screen.

As described in "High Brightness precautions: Hazard Distance (HD)", page 6 , it is mandatory to create a restricted zone within the beam areas closer than any NOHD. In the enclosed projection area the combination of two restricted zones are relevant: The restricted zone of the projected beam toward the screen; taking into account 1 meter Separation Width (SW) from the beam onward. Combined with the restricted zone related to the rear reflection from the screen (HDreflection); also taking into account a 1 meter lateral separation.

The HDreflection distance equals 25% of the difference between the determined HD distance and the projection distance to the rear projection screen. To determine the HD distance for the used lens and projector model see graphs in chapter "HD in function of the lens Throw Ratio (TR)", page 8 .

$$\text{HDreflection} = 25\% (\text{HD} - \text{PD})$$

The light emitted from the screen within the observation shall never exceed the RG2 exposure limit, determined at 10 cm. The HDdiffuse can be neglected if the measured light at the screen surface is below 5000 cd/m<sup>2</sup> or 15000 LUX.

## 1.7 HD in function of the lens Throw Ratio (TR)



### TR (Throw Ratio)

The ratio of the distance to the screen (throw) to the screen width.

# 1. Safety

## HD versus Throw Ratio

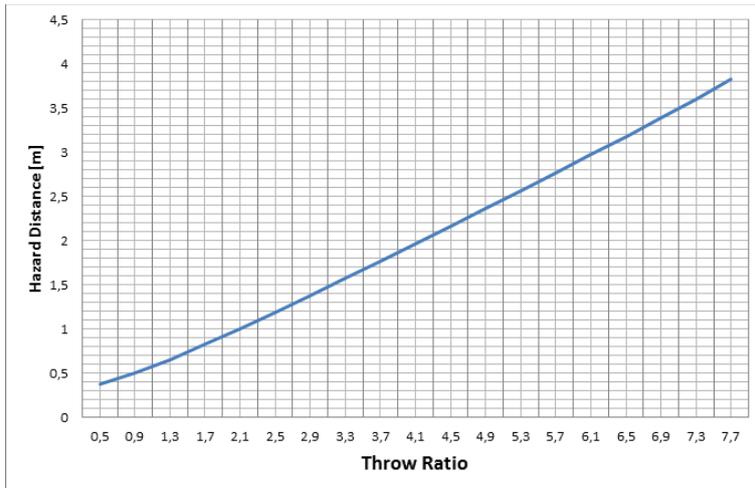


Image 1-5

Graph shows Hazard Distance in meters versus Throw ratio of the lens

## 1.8 Safety symbols

### Description of safety symbols used in product documentation or on product.

Image	Description
	Refer to user manual for further information!
	Caution! Do not stare into beam, RG2 product.
	No telephone! Do not connect to telephone lines.
	Caution! With interchangeable lens with throw ratio greater than 2.33, consider hazard distance and installation requirements for RG3 product. Refer User Manual.  Caution! With Interchangeable lens with throw ratio greater then 3.15, consider hazard distance and installation requirements for RG3 product. Refer User manual.

### Location of Safety Label

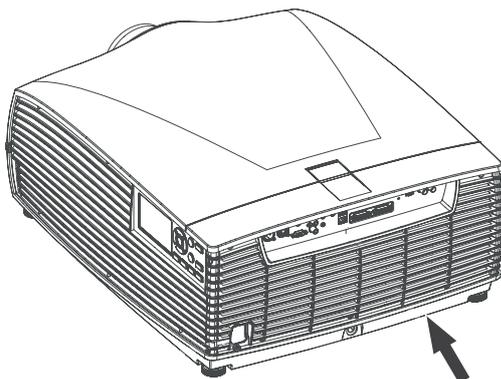


Image 1-6

## Disposal Information

Waste Electrical and Electronic Equipment



This symbol on the product indicates that, under the European Directive 2012/19/EU governing waste from electrical and electronic equipment, this product must not be disposed of with other municipal waste. Please dispose of your waste equipment by handing it over to a designated collection point for the recycling of waste electrical and electronic equipment. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate these items from other types of waste and recycle them responsibly to promote the sustainable reuse of material resources.

For more information about recycling of this product, please contact your local city office or your municipal waste disposal service.

For details, please visit the Barco website at: <http://www.barco.com/en/AboutBarco/weee>

## WEEE Information

This product conforms to all requirements of the EU Directive on waste electrical and electronic equipment (WEEE). This product shall be recycled properly. It can be disassembled to facilitate proper recycling of its individual parts.

Consult your dealer or relevant public authority regarding drop-off points for collection of WEEE. For details, please visit the Barco website at: <http://www.barco.com/en/AboutBarco/weee>.



**WARNING: This product contains chemicals, including lead, known to the State of California to cause birth defects or other reproductive harm. Recycle properly, do not dispose of in ordinary waste!**

## Turkey RoHS compliance



Türkiye Cumhuriyeti: AEEE Yönetmeliğine Uygundur.

[Republic of Turkey: In conformity with the WEEE Regulation]

## 1.9 RoHS compliance

### 中国大陆 RoHS (Chinese Mainland RoHS)

根据中国大陆《电器电子产品有害物质限制使用管理办法》(也称为中国大陆RoHS), 以下部分列出了Barco产品中可能包含的有毒和/或有害物质的名称和含量。中国大陆RoHS指令包含在中国信息产业部MCV标准:“电子信息产品中有毒物质的限量要求”中。

According to the “Management Methods for the Restriction of the Use of Hazardous Substances in Electrical and Electronic Products” (Also called RoHS of Chinese Mainland), the table below lists the names and contents of toxic and/or hazardous substances that Barco's product may contain. The RoHS of Chinese Mainland is included in the MCV standard of the Ministry of Information Industry of China, in the section “Limit Requirements of toxic substances in Electronic Information Products”.

零件项目 (名称) Component Name	有毒有害物质或元素 Hazardous Substances or Elements					
	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr6+)	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
印制电路配件 Printed Circuit Assemblies	X	O	X	O	O	O
外接电(线)缆 External Cables	X	O	O	O	O	O
内部线路 Internal wiring	X	O	O	O	O	O
镜头支架 Lensholder	X	O	O	O	O	O
激光发生器 Laser	X	O	O	O	O	O

## 1. Safety

零件项目(名称) Component Name	有毒有害物质或元素 Hazardous Substances or Elements					
	铅 (Pb)	汞 (Hg)	镉 (Cd)	六价铬 (Cr6+)	多溴联苯 (PBB)	多溴二苯醚 (PBDE)
底架 Chassis	○	○	○	○	○	○
外壳 Enclosure	○	○	○	○	○	○
螺帽,螺钉(栓),螺旋(钉),垫圈,紧固件 Nuts, bolts, screws, washers, Fasteners	X	○	○	○	○	○
电源供应器 Power Supply Unit	X	○	○	○	○	○
散热片(器) Heatsinks	○	○	○	○	○	○
风扇 Fan	X	○	○	○	○	○
塑胶外壳 Plastic Enclosure	○	○	○	○	○	○
外壳 Enclosure	○	○	○	○	○	○
电池(组) Batteries	○	○	○	○	○	○
文件说明书 Paper Manuals	○	○	○	○	○	○
装置配件 Installation kit	○	○	○	○	○	○
附電池遙控器 Remote control	X	○	○	○	○	○

本表格依据SJ/T 11364的规定编制  
This table is prepared in accordance with the provisions of SJ/T 11364.

○: 表示该有毒有害物质在该部件所有均质材料中的含量均在 GB/T 26572 标准规定的限量要求以下。  
○: Indicates that this toxic or hazardous substance contained in all of the homogeneous materials for this part is below the limit requirement in GB/T 26572.

X: 表示该有毒有害物质至少在该部件的某一均质材料中的含量超出 GB/T 26572 标准规定的限量要求。  
X: Indicates that this toxic or hazardous substance contained in at least one of the homogeneous materials used for this part is above the limit requirement in GB/T 26572.

在中国大陆销售的相应电子信息产品(EIP)都必须遵照中国大陆《电子电气产品有害物质限制使用标识要求》标准贴上环保使用期限(EFUP)标签。Barco产品所采用的EFUP标签(请参阅实例, 徽标内部的编号使用于指定产品)基于中国大陆的《电子信息产品环保使用期限通则》标准。

All Electronic Information Products (EIP) that are sold within Chinese Mainland must comply with the "Marking for the restriction of the use of hazardous substances in electrical and electronic product" of Chinese Mainland, marked with the Environmental Friendly Use Period (EFUP) logo. The number inside the EFUP logo that Barco uses (please refer to the photo) is based on the "General guidelines of environment-friendly use period of electronic information products" of Chinese Mainland.



## 2. GETTING TO KNOW THE PROJECTOR

### Overview

- Main components
- Service and maintenance
- LED status light
- LCD panel
- Local keypad
- Wireless remote control
- Connector panel
- Color Wheels
- Optional accessories

### 2.1 Main components

#### Naming conventions

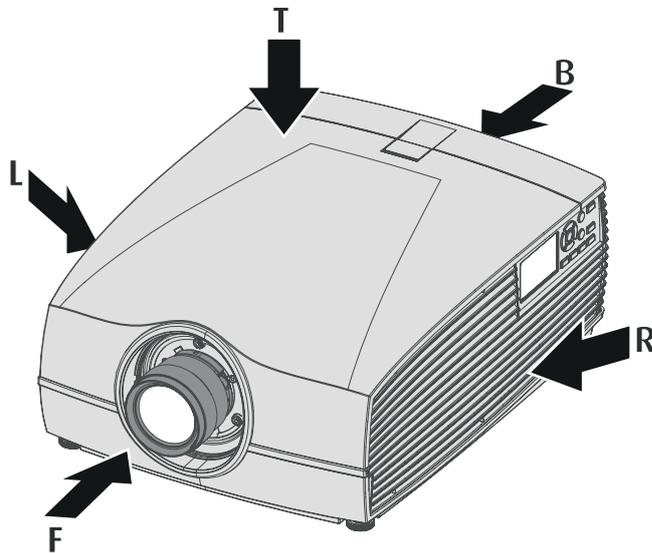


Image 2-1  
L Left  
T Top  
B Back  
R Right  
F Front

### Projector Front

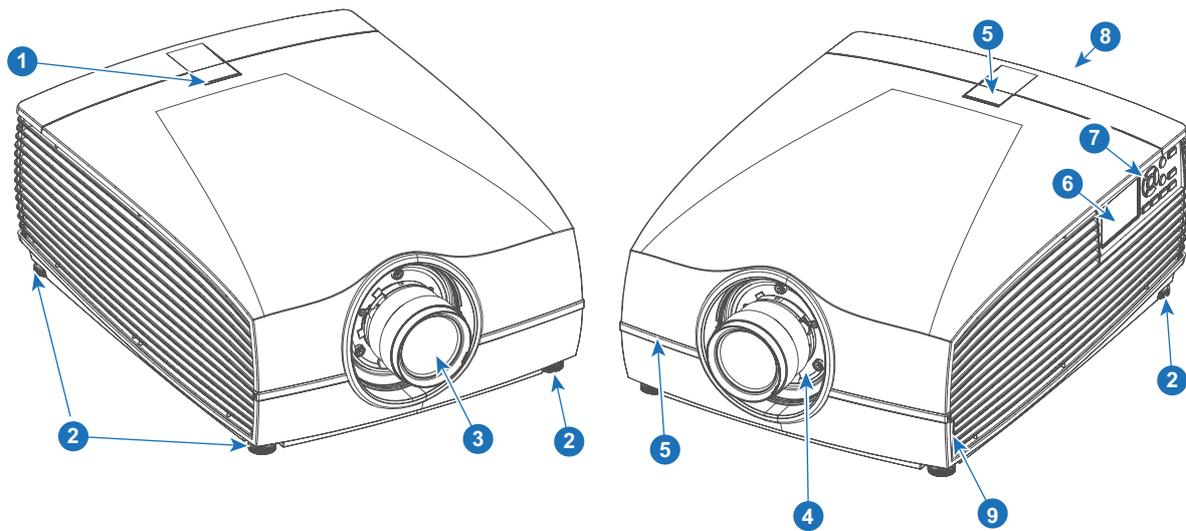


Image 2-2

- 1 LED status light
- 2 Adjustable feet
- 3 Projector lens
- 4 Lens holder
- 5 IR Receiver: for remote control communication
- 6 LCD panel
- 7 Keypad
- 8 Connector panel
- 9 Front USB and triggerboard

## 2.2 Service and maintenance

### General

The F90 does not have any user-serviceable parts.

All service tasks must only be carried out by the manufacturer, or a Barco authorized service personnel or Barco technicians.

The projector color wheel can be replaced by users in the field. See "Change the color wheel", page 17 for more information.

## 2.3 LED status light

### About

The F90 status is located on the top side of the projector, near the IR receiver (ref. 1, image 2-2).

During normal operation the LED is unlit. In the event of a critical error or high temperature, the LED will display red.

By critical error, the projector cannot be restarted until the projector is disconnected from the power supply and then reconnected again. If the reason for the error persists, the projector will again go to critical error status.

By high temperature, the projector will restart when it has cooled down, and temperatures are back within the normal operating limitations.

## 2.4 LCD panel

### About

The LCD panel (reference 1, image 2-3) is located on the right side of the projector. It shows the following information for the projector, and is a mirror of the OSD. (On Screen Display)

- Projector status
- Network address
- Active source
- Current firmware version

## 2.5 Local keypad

### About

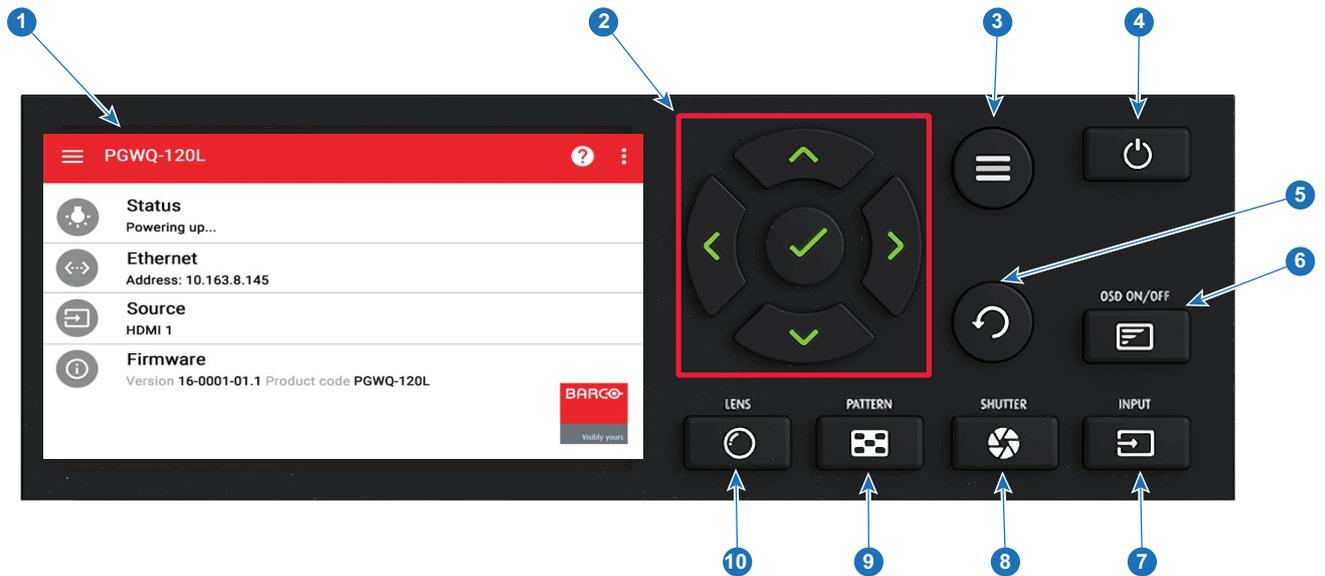


Image 2-3

Item No.	Name	Description
2	Navigation keys	Navigation arrows (up, down, left, right), confirm selection (✓)
3	OSD Display	Turn the On Screen Display (OSD) menu ON or OFF.
4	Standby	Power on / standby
5	Back	Undo action / back to previous screen.
6	OSD ON/OFF	Deactivate the On Screen Display (OSD). Only critical warnings will be displayed.
7	Input	Activates input source menu on OSD or in LCD
8	Shutter	Open or close lens shutter
9	Test Patterns	Activates test pattern menu on OSD or in LCD
10	Lens	Activates test pattern menu on OSD or in LCD

## 2.6 Wireless remote control

### General

The projector remote control is a full feature wireless remote control, powered by two (2) standard AA batteries. The battery compartment is on the back side of the remote control.

The remote control is backlit for use in dark environments. It also has a data-jack that allows for wired connection to the projector. When the wire is connected, the IR beam and internal batteries are switched off.

The projector has 2 IR receivers, one at the front and one at the top rear, which are used to receive signals from the wireless remote control.



**Source/input compatibility is dependant on projector configuration. The OSD will display “Not available” when an unsupported source or input is selected.**

## 2. Getting to know the projector

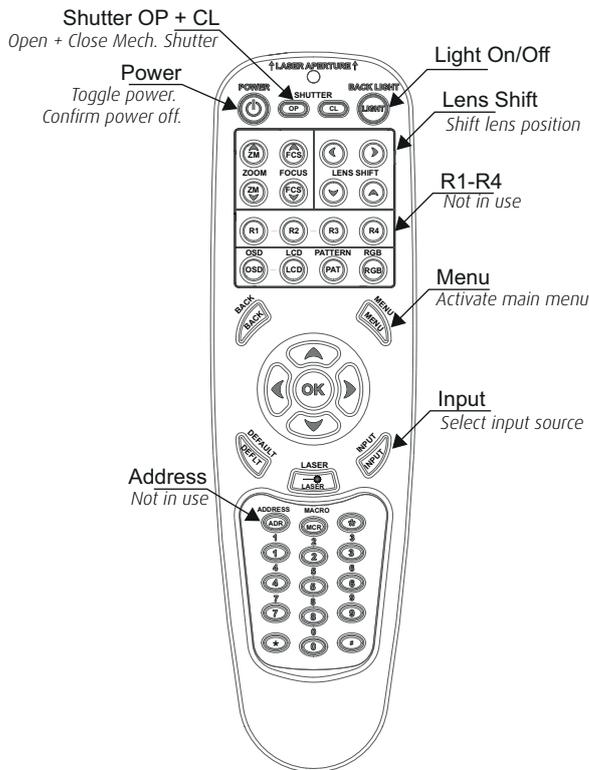


Image 2-4



**WARNING: Laser radiation class II product; wavelength 670nm; maximum output 1mW.**

Remote control complies with applicable requirements of 21 CFR 1040.10 and 1040.11.

Remote control complies with applicable requirements of EN/IEC 60825-1/2007.

### Specifications

Parameter	Value
Type	IR, NEC protocol
Sensors	2
Carrier	38 kHz
Range	7m
Laser	1 mW, 670nm

## 2.7 Connector panel

### General

The source input panel is located at the back of the projector. For source specifications, see "Connector specifications", page 35.

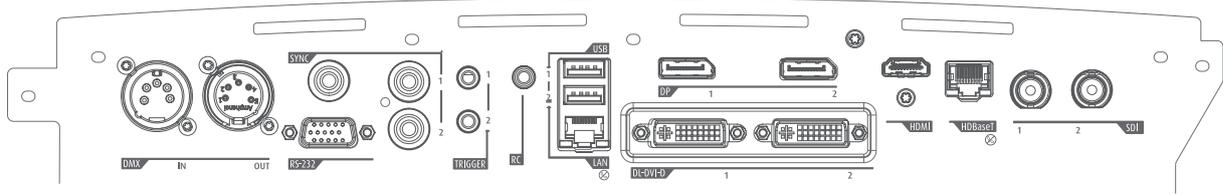


Image 2-5

Name	Description
DMX	DMX512 input
RS-232	9-pin DB9 connector
Sync	BNC Sync Port IN/OUT; Bidir mini-DIN
Trigger	12VDC - 0,5A (6W)
RC	XLR connector for wired remote
USB	USB 2.0 type A, 4 pin
LAN	Standard RJ45 connector
DP	Standard display port
DL-DVI-D	Dual DVI-I 1.0 (DVI_D Functionality)
HDMI	Standard HDMI 2.0
HDBaseT	Standard RJ45 8P8C Connector
SDI	SDI 1 is Input, SDI 2 is pass through. (out)

## Connectors

## 2.8 Color Wheels

### Overview

- Color Wheel range
- Change the color wheel

### 2.8.1 Color Wheel range

#### About

The F90 is delivered with two (2) different color wheels: COLOR and BRIGHTNESS.

COLOR delivers great depth of color and a broad gamut.

BRIGHTNESS provides an extra boost to white segments and very good primary and secondary colors, which makes it ideal for brightness critical applications.

The F90 is designed so that users can change the color wheel quickly and easily whilst on site, without the use of special tools.

### 2.8.2 Change the color wheel



**CAUTION:** The F90 contains no user serviceable parts except the Color Wheel. Attempts to modify/replace mechanics or electronics inside the housing or compartments will violate any warranties and may be hazardous.



**CAUTION:** When placing the projector on the right side for colorwheel replacement, ensure that the projector are properly secured in this position. Ensure also that the surface used for this operation is suitable with respect to flatness. It may result in great danger to personnel and equipment if the projector overturning from the upright position.

## 2. Getting to know the projector

---



The system is automatically configured with the correct CW algorithms following the product ID of the CW.  
The CW assembly contains no serviceable parts, and further de-assembly should not be attempted.

---



The bottom of the packaging container have a cut out that is intended for placing the projector in a upright position, on the right side. This is suitable as docking during change of the colorwheel. Remove the middle longitude spacer in the container bottom in order to release this cutout.

---

### How to replace the color wheel (CW)

1. Place the projector on its side (right or left) on a flat surface.
2. Release the seven (7) captive screws on the projector bottom. Remove the bottom cover carefully.
3. Release the three (3) captive screws to open CW cover.
4. Release the three (3) captive screws holding the CW in place.
5. Carefully remove the color wheel.
6. Replace with the new color wheel.
7. Reinstall the three (3) captive screws for holding the CW in place.
8. Reinstall the three (3) captive screws of the CW cover.
9. Replace the projector bottom cover, and reinstall the seven (7) captive screws.
10. Reposition the projector so that its bottom is sitting flat on a level surface.

## 2.9 Optional accessories

---



**WARNING:** Always use Rigging Frame when the projector are installed outside a flat horizontal surface, or being stacked together with several projectors.

---

### Rigging frame

Item number	Item description
B593624	Rigging frame

The F90 rigging frame is a rugged, easy to install frame designed to streamline the process of installing one or more projectors.

When installed in the frame, the projector:

- can be rotated around x, y and z axis in order to obtain a seamless adjustment.
- can be installed from a truss or on pedestal
- can be easily stacked one on top of one another, for instance in dual- or multi- channel installations

### Flight case

Item number	Item description
B593624	Flight case

The F90 flight case is custom-designed to ship the projector, including flight frame, signal and power cords and up to two lenses. The case is fully-lined to protect the projector and lenses during transit and storage.

## 3. LENSES

### About

#### Overview

- Approved Lenses
- Lens range
- Replace a lens
- Adjust zoom, focus and iris

### 3.1 Approved Lenses

#### Approved Lenses

Partnumber	Description	For North Amrica	Outside North america
R9801214	FLD 1.6 - 2.32 : 1 (EN11)	approved	approved
R9801218	FLD 0.74 : 1 (EN12)	approved	approved
R9801228	FLD 1.24 - 1.6 : 1 (EN13)	approved	approved
R9801209	FLD 2.37 - 3.79 : 1 (EN14)	Pending FDA approval – professional use only	approved – professional use only
R9801225	FLD 1:16 : 1 (EN15)	approved	approved
R9801249	FLD 3.8 - 6.5 : 1 (EN16)	Pending FDA approval – professional use only	approved – professional use only
R9801216	FLD+ 1.7 - 2.5 : 1 (EN41)	approved	approved
R9801226	FLD+ 0.8 : 1 (EN42)	approved	approved
R9801230	FLD+ 1.2 - 1.7 : 1 (EN43)	approved	approved
R9801211	FLD+ 2.5 - 4.6 : 1 (EN44)	Pending FDA approval – professional use only	approved – professional use only
R9801220	FLD+ Long Focus 0.8 - 1.21 : 1 (EN45)	approved	approved
R9801221	FLD+ Short Focus 0.8 - 1.21 : 1 (EN46)	approved	approved
R9801295	FLD+ 0.65 : 1 (EN47)	approved	approved
PN_EN58	FLD+ 0.28 : 1 (EN58)	approved	approved

This projector may become Risk Group 3 (RG3) when an interchangeable lens with throw ratio greater than 3.15 is installed. For Northern America, installation requirements according to Risk group 3 (RG3) must be followed when interchangeable lens with throw ratio greater than 2.33 is installed.

Refer to the manual chapter 1.7 for the throw ratio versus hazard distance before operation.

### 3.2 Lens range



**CAUTION:** Always remove the lens from the lens holder before moving or transporting the projector. Failure to do this may cause damage to the lens holder and prism.

#### Available lenses — WUXGA

The FLD lens range is custom-engineered for WUXGA and 1080 projectors.

The electrical connection to the lens motors is via a spring probe contact (pogo) pin array on the bayonet mount.

The projector will automatically detect and identify the lens when it is installed. Automatic detection is not available for 3rd party lenses.

### 3. Lenses

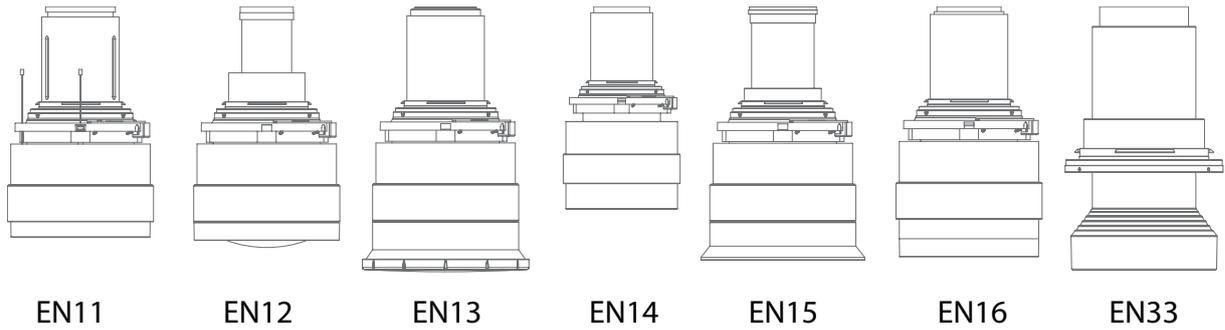


Image 3-1

Name	Description	Part number	Weight
FLD Lens 1.6 - 2.32 : 1 (EN11)	1.6-2.32 : 1 (WUXGA)	R9801214	2.2 kg
FLD Lens 0.74 : 1 (EN12)	0.74:1 (WUXGA)	R9801218	1.9 kg
FLD Lens 1.24 - 1.6 : 1 (EN13)	1.24 - 1.6 : 1 (WUXGA)	R9801228	2.6 kg
FLD Lens 2.37 - 3.79 : 1 (EN14)	2.37 - 3.79 : 1 (WUXGA)	R9801209	2.5 kg
FLD Lens 1.16:1 (EN15)	1.16 : 1 (WUXGA)	R9801225	2.4 kg
FLD Lens 3.80 - 6.50 : 1 (EN16)	3.8 - 6.5 : 1 (WUXGA)	R9801249	2.5 kg

Name	Working F#	Iris / Iris F#	Zoom Ratio	Focal Length (mm)	Focus Range (m)
FLD Lens 1.6 - 2.32 : 1 (EN11)	2.1-2.52	Yes 2.1-6.5	1.45	33.2-48.1	2.0-15
FLD Lens 0.74 : 1 (EN12)	2.1	Yes 2.1-6.5	-	16.35	0.5-5
FLD Lens 1.24 - 1.6 : 1 (EN13)	2.1-2.22	Yes 2.1-6.5	1.3	25.59-33.24	1.0-15
FLD Lens 2.37 - 3.79 : 1 (EN14)	2.1-2.72	Yes 2.1-6.5	1.6	49.1-78.6	3.0-30
FLD Lens 1.16:1 (EN15)	2.1	Yes 2.1-6.5	-	23.98	1.5-15
FLD Lens 3.80 - 6.50 : 1 (EN16)	2.1-2.66	Yes 2.1-6.5	1.74	78.3-136.2	4.0-40

#### Available lenses — 4K, WUXGA, WQXGA

The FLD+ (EN4X) lens range is custom-engineered for WQXGA projectors.

The electrical connection to the lens motors is via a spring probe contact (pogo) pin array on the bayonet mount. The projector will automatically detect and identify the lens when it is installed. Automatic detection is not available for 3rd party lenses.

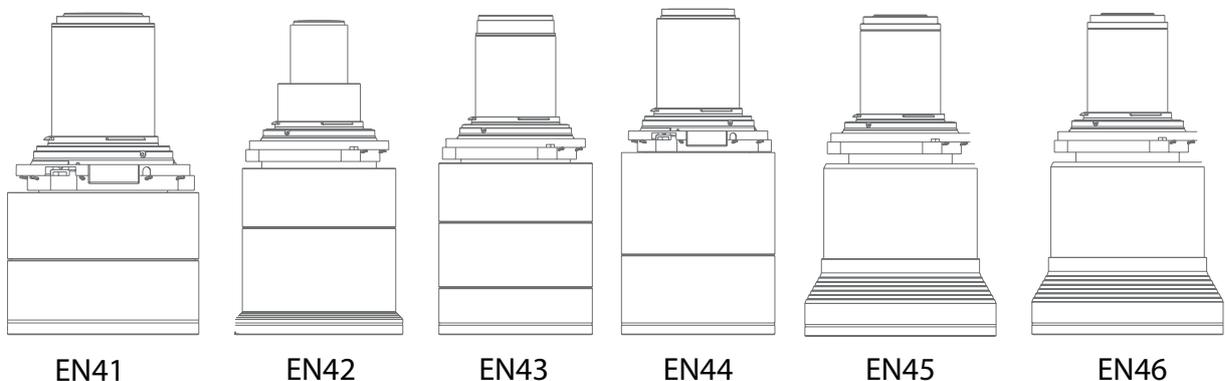


Image 3-2

Name	Description	Part number	Weight
FLD+ Lens 1.7 - 2.5 : 1 (EN41)	1.58 - 2.33 : 1 (WUXGA) / 1.7 - 2.5 : 1 (WQXGA)	R9801216	2.54 kg
FLD+ NV Lens 1.7 - 2.5 : 1 (NV41)	IR Optimized, 1.58 - 2.33 : 1 (WUXGA) / 1.7 - 2.5 : 1 (WQXGA)	R9801216	2.54 kg
FLD+ Lens 0.8 : 1 (EN42)	0.75 : 1 (WUXGA) / 0.8 : 1 (WQXGA)	R9801226	2.7 kg
FLD+ Lens 1.2 - 1.7 : 1 (EN43)	1.12 - 1.58 : 1 (WUXGA) / 1.2 - 1.7 : 1 (WQXGA)	R9801230	2.84 kg
FLD+ NV Lens 1.2 - 1.7 : 1 (NV43)	IR Optimized, 1.12 - 1.58 : 1 (WUXGA) / 1.2 - 1.7 : 1 (WQXGA)	R9801286	2.84 kg
FLD+ Lens 2.5 - 4.6 : 1 (EN44)	2.33 - 4.3 : 1 (WUXGA) / 2.5 - 4.6 : 1 (WQXGA)	R9801211	3.08 kg
FLD+ Lens 0.75 - 1.13 : 1 (EN45)	0.75 - 1.13 : 1 (WUXGA) / 0.8 - 1.21 : 1 (WQXGA)	R9801220	3.04 kg
FLD+ Lens 0.75 - 1.13 : 1 (EN46)	0.75 - 1.13 : 1 (WUXGA) / 0.8 - 1.21 : 1 (WQXGA)	R9801221	3.14 kg
FLD+ NV Lens 0.8 - 1.21 : 1 (NV46)	IR Optimized, 0.75 - 1.13 : 1 (WUXGA) / 0.8 - 1.21 : 1 (WQXGA)	R9801287	3.14 kg
FLD+ Lens 0.65 : 1 (EN47)	0.61 : 1 (WUXGA) / 0.65 : 1 (WQXGA)	R9801295	5.4 kg

Name	Working F#	Iris / Iris F#	Zoom Ratio	Focal Length (mm)	Focus Range (m)
FLD+ Lens 1.7 - 2.5 : 1 (EN41)	2.1-2.5	Yes 2.1-6.5	1.47	33.70-49.54	1.5 - 15
FLD+ NV Lens 1.7 - 2.5 : 1 (NV41)	2.1-2.5	Yes 2.1-6.5	1.47	33.70-49.54	1.5 - 15
FLD+ Lens 0.8 : 1 (EN42)	2.1	Yes 2.1-6.5	-	16.12	0.7 - 7
FLD+ Lens 1.2 - 1.7 : 1 (EN43)	2.4-2.7	Yes 2.4-6.5	1.42	23.95-34.02	1.5 - 15
FLD+ NV Lens 1.2 - 1.7 : 1 (NV43)	2.4-2.7	Yes 2.4-6.5	1.42	23.95-34.02	1.5 - 15
FLD+ Lens 2.5 - 4.6 : 1 (EN44)	2.1-2.93	Yes 2.1-6.5	1.85	49.52-91.60	2.5-25
FLD+ Lens 0.75 - 1.13 : 1 (EN45)	2.4-3.29	Yes 2.4-6.5	1.51	15.85-23.93	5.0 - 30
FLD+ Lens 0.75 - 1.13 : 1 (EN46)	2.4-3.29	Yes 2.4-6.5	1.51	15.98-23.99	0.7 - 7
FLD+ NV Lens 0.8 - 1.21 : 1 (NV46)	2.4-3.29	Yes 2.4-6.5	1.51	15.98-23.99	0.7 - 7
FLD+ Lens 0.65 : 1 (EN47)	2.1	Yes 2.1-6.0	-	12.6	0.5 - 4.0

### 3.3 Replace a lens

#### Lens lever

The F90 lens mount and lens lever is designed to prevent damage to the lens board while providing an easy and stable lens change procedure.

The lens lever, located at the bottom of the lens mount (ref. ) slides between two positions, far left (default position — locked) and far right (unlocked).



**Always close the projector shutter before attempting to remove or install a lens.**

**To do this, press the shutter button on the keypad or remote. The keypad button will illuminate red when the shutter is closed.**

**Press the shutter button again to open the shutter and resume normal operation. The keypad button will illuminate white when the shutter is open.**

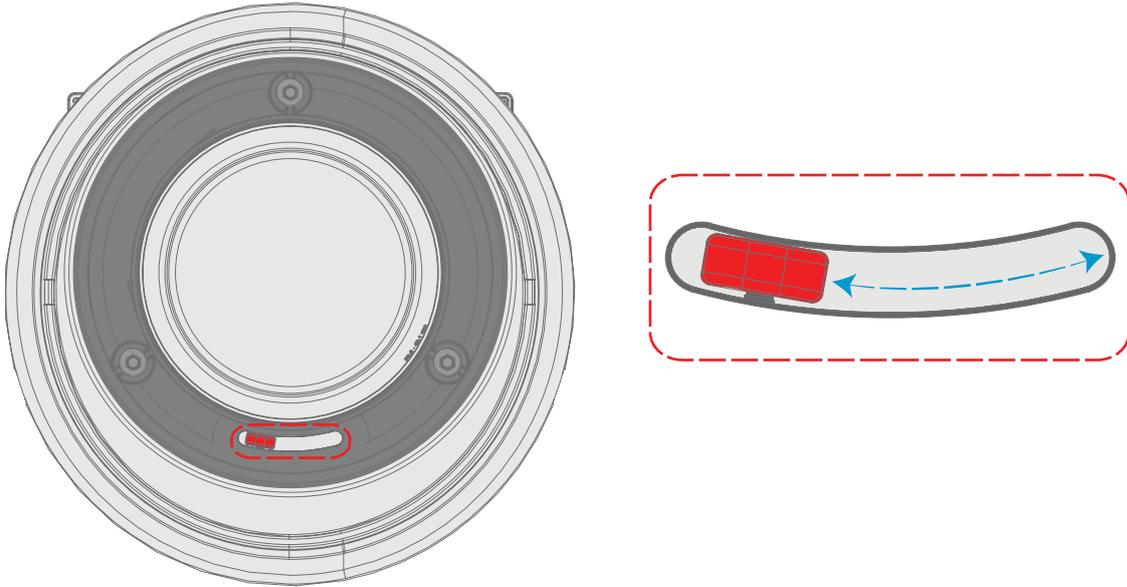


Image 3-3

### Install a lens

1. Verify that the projector shutter is closed (shutter is closed when the shutter icon on the projector keypad is red).
2. Verify that the lens release lever is in its default position at the far left of the slide, as illustrated.
3. Remove the protective cap at the lens bayonet end
4. Align the lens so that the red marking on the bayonet is facing upwards, towards the red marking on the top of the projector cabinet.
5. Position the lens bayonet into the projector lens mount and support in place with one hand.
6. Slide the lens lever to the far right.
7. Verify that the lever is firmly in place at the far right end of the slide before removing your hand from the lens. (image 3-4)

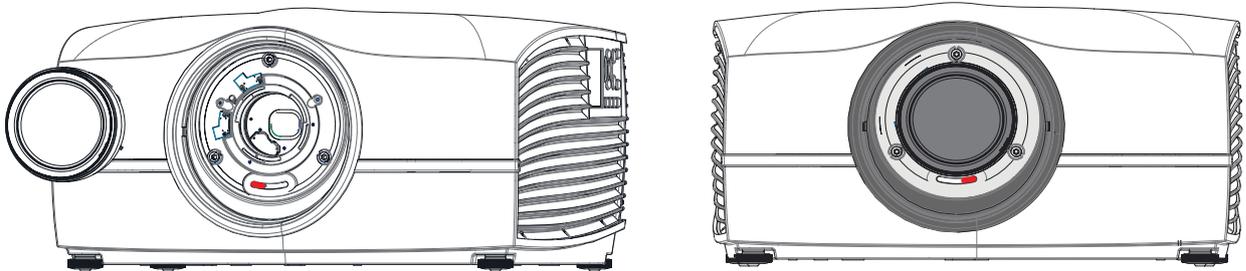


Image 3-4

### Remove a lens

1. Support the lens with one hand.
2. Use the other hand to push the lens release lever in and then slide it to the far left of the slide.
3. Pull the lens straight out of the projector lens mount.
4. Replace with another lens, or install the projector lens cap. (image 3-5)

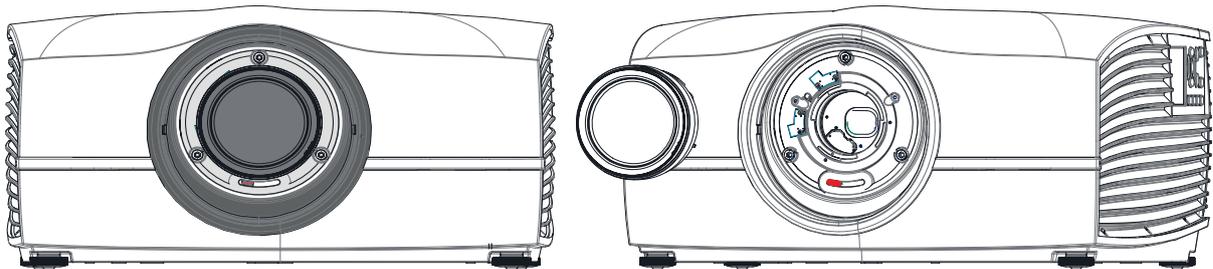


Image 3-5

### 3.4 Adjust zoom, focus and iris

#### General

**Zoom** controls the size of the projected image.

**Focus** controls the sharpness of the projected image.

**Iris** controls the contrast and focus depth of the image. Decreasing the iris stop will increase contrast and image depth, at the same time as it decreases brightness.

Lens zoom, focus and iris adjustments are motorized. You can use the remote control, local keypad, OSD and/or RS-232 commands to adjust the lens zoom, focus and iris positions.



**Not all lenses have zoom or iris control. The matrix below shows what controls are available per lens.**



**Iris will be available for future SW upgrades.**

	EN11	EN12	EN13	EN14	EN15	EN16	EN33	EN41	EN42	EN43	EN44	EN45	EN46	EN47
Iris	✓	✓	✓	✓	✓	✓	✗	✓	✓	✓	✓	✓	✓	✓
Zoom	✓	✗	✓	✓	✗	✓	✗	✓	✗	✓	✓	✓	✓	✗
Focus	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓	✓

For best results, lens adjustments should be done in the following order: zoom, focus and then iris (where applicable).



## 4. PHYSICAL INSTALLATION

### About

This chapter describes the physical conditions and procedures required when installing the F90, as well as outlines some of the considerations you should take into account when designing and setting up the projector installation.

Each projector installation is unique, and as such the information in this chapter is only provided as a guideline. Likewise, any images or graphical representations shown here are for illustrative purposes only.

If you require further information and assistance during the installation process, contact a qualified projection technician or your local support office for advice.

### Overview

- Installation process
- Installation conditions
- Initial inspection
- Positioning the projector
- Mounting the projector
- Throw distance
- Scheimpflug (Boresight) adjustment
- Scheimpflug adjustment procedure

### 4.1 Installation process

#### Recommended installation sequence

Item	Procedure	Read more...
1	Confirm that the installation area meets all technical and environmental requirements.	"Installation conditions", page 25
2	Decide where the projector will be mounted	"Positioning the projector", page 28
3	Unpack the projector and confirm that all equipment is present and in good working order.	"Initial inspection", page 27
4	Mount the projector	"Mounting the projector", page 28
5	Install the projector lens	"Replace a lens", page 21
6	Connect the source	"Projector source and control connections", page 35
7	Power up the projector	"Power up the projector", page 38
8	Set up the image	"Image menu", page 43

### 4.2 Installation conditions

#### Environmental conditions



**Barco projectors are manufactured according to specific design standards, which also include environmental conditions. Failing to follow the terms and conditions outlined in this chapter can result in loss of product warranty.**

The table below summarizes the physical environment in which the projector may be safely operated or stored.

Environment	Ambient operating temperature	Relative humidity	Storage Conditions
0 — 500 M	10 to 45 °C	10 to 65%	-20 to 60 °C, 10 – 90 %
0 – 500 M	10 to 40 °C	10 to 80%	-20 to 60 °C, 10 – 90 %
500 – 1500 M	10 to 40 °C	10 to 80%	-20 to 60 °C, 10 – 90 %

#### 4. Physical installation

Environment	Ambient operating temperature	Relative humidity	Storage Conditions
1500 – 3000 M	10 to 35 °C	10 to 80 %	-20 to 60 °C, 10 – 90 %
Maximum air flow	900 m <sup>3</sup> / hour	-	NA

#### AutoDim function

The F90 AutoDim function is integrated in the projector firmware. The projector continually senses and calculates the ambient temperature in the installation location and will, when necessary, automatically dim the light output if the projector is operating in the extreme ends of the recommended ambient environmental conditions, as illustrated in the graph below.

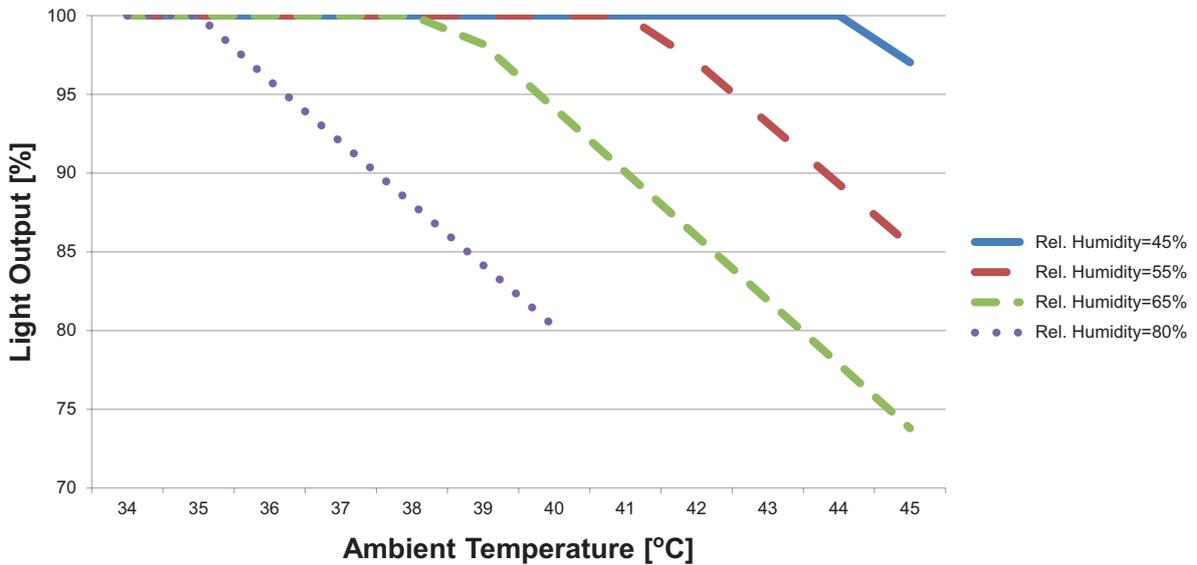


Image 4-1

#### Mains power requirements

Projector	Power requirements
F90	110 — 240 V, 50 — 60 Hz

To protect operating personnel, the National Electrical Manufacturers Association (NEMA) recommends that the instrument panel and cabinet be grounded.

In no event shall this projector be operated without an adequate cabinet ground connection.

The AC supply must be installed by a qualified electrician in conformance to local codes. Hardware, wire sizes and conduit types must comply with local codes.

AutoDim function will be activated when mains power are 110V or below.

## Ventilation

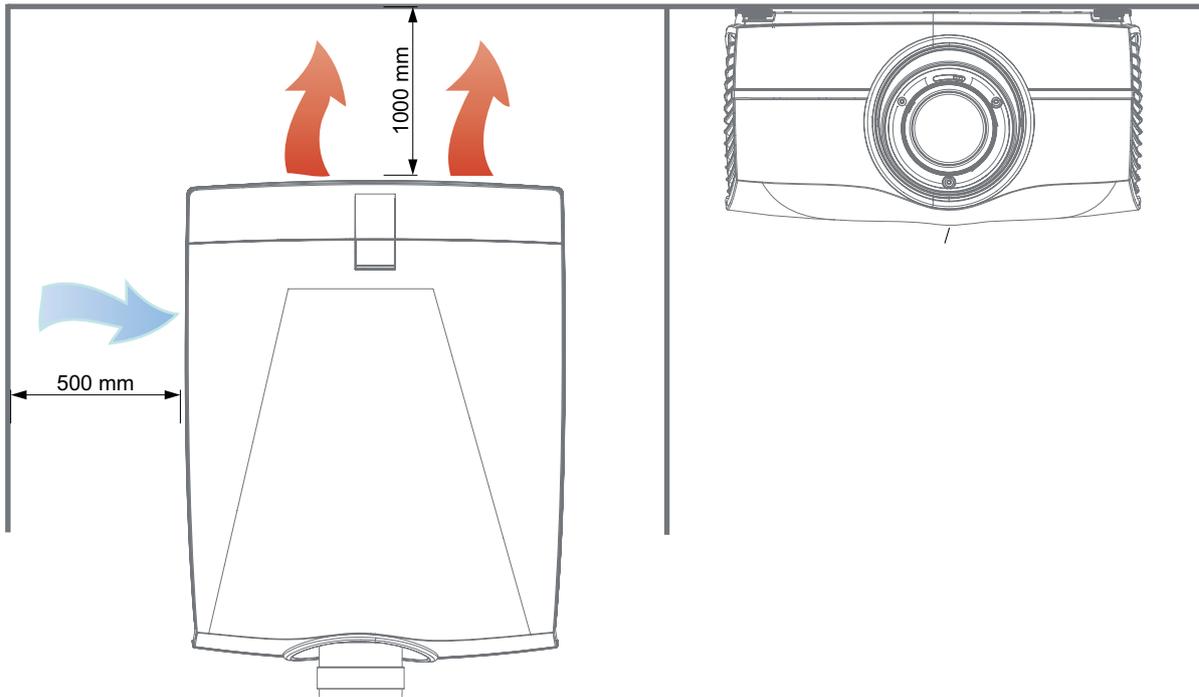


Image 4-2

## Projector weight and footprint

Weight: 44.5 kg

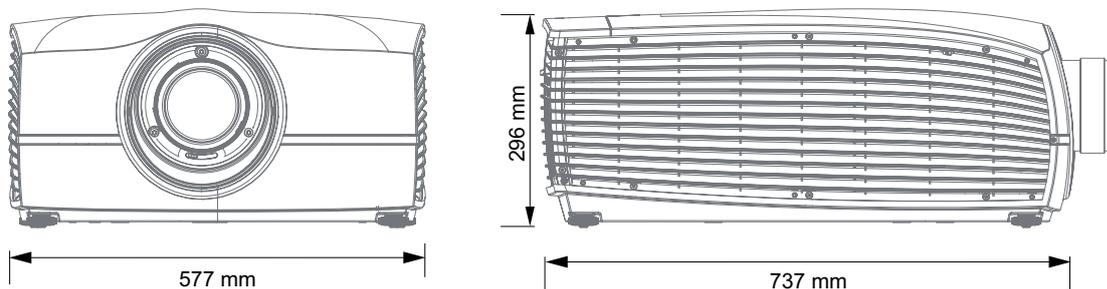


Image 4-3

## 4.3 Initial inspection

### General

Each projector is inspected and rigorously tested at our production facility to ensure that it is free from any mechanical or electrical defects.

Upon receipt of the projector, we recommend that customers inspect the projector for any signs of damage that may have occurred in transit. If damage is found, file a claim with the shipping carrier immediately. Notify the Barco Sales and Service office, or your preferred Barco agent, of the damage as soon as possible.

### Box Contents

Your projector box should contain the following:

- Projector unit
- Power cord (suitable for region)
- Quick start guide
- Safety manual
- Remote Control
- Additional Color Wheel



The projector lens is delivered in a separate box.

---

### 4.4 Positioning the projector

---



**CAUTION:** The position and physical securing of the projector must be sufficient to prevent it from accidental or involuntary movement. Proper securing of the projector is the responsibility of the installer and user. The Projector are heavy, and can cause severe damage and injuries if falling.

---

#### General guidelines

Proper positioning of the projector lessens the overall picture setup time, and ensures a better image with fewer artifacts.

---



Focus and sharpness of the image can be adversely affected if the lens axis is not fully perpendicular to the projection surface.

---



Using extended cable lengths may result in reduced image quality as well as loss of control information such as EDID (Extended Display Information Data).

---

The following guidelines can help you determine the best physical location for the projector.

- Only install the projector on a sturdy flat surface, or in an approved rigging frame.
- Do not install the projector in a thoroughfare or other area where it is at risk of being pushed or jostled.
- Allow sufficient free space around the projector for ventilation and exhaust, as described in section "Installation conditions", page 25.
- Use the throw ratio of the installed lens as a guideline for the projector's physical distance from the screen.
- Wherever possible, the projector lens surface should be positioned so that it is perfectly perpendicular to the center of the screen.  
Use the projector offset (lens shift), rather than physical angling, to correct any off-center positioning.
- Minimize the source cable length as much as possible.  
In general HDBaseT and 3G-SDI are long-haul interfaces and suitable for bespoke installations using relatively long cables. DP, HDMI and DVI are short-haul interfaces using pre-assembled cables with limited cable lengths.
- Limit the use of power cable extensions wherever possible. Where physical limitations necessitate their use, make sure that the extension cord has adequate surge protection and meets all electrical requirements of the connection.
- Keep the projector away from equipment that emits electromagnetic energy for example, motors, transformers and elevators.

### 4.5 Mounting the projector

---

#### Mounting safety

When mounting a projector in a rig, always use an interface plate (between the projector and the mount) that has provision for a safety wire or another safety mechanism, to ensure that the projector does not fall down should the interface plate come loose from the mount.

Always screw the interface plate securely to the projector body while the projector is on the ground (i.e. cannot fall down). Then attach proper safety wire between the interface plate and the rig before mounting the projector in the rig

---



Where possible, the projector lens must be positioned exactly perpendicular to the center of the screen. Use the projector offset (lens shift), rather than physical angling, to correct any off-center positioning.

---



**CAUTION:** The position and physical securing of the projector must be sufficient to prevent it from accidental or involuntary movement. Proper securing of the projector is the responsibility of the installer and user.

---



**CAUTION:** Always use a Rigging Frame when the projector shall be mounted in other ways than on the feet, on a flat surface.



The threaded hole in the lower back end of the projector is **NOT** suitable for lifting or other heavy operations. Only for adjustment purposes.

### Mounting on a flat surface

1. Position the projector at the desired location.
2. Power up the projector.
3. Go to *Main Menu / Test Patterns* and select an internal hatch pattern to display on the screen.
4. Adjust the projector legs until the projected hatch pattern is a level and perfect rectangle.

### Adjustable feet

Twisting the adjustable feet in either direction, left or right, allows you to fine-adjust the projector position for precise vertical mechanical alignment.

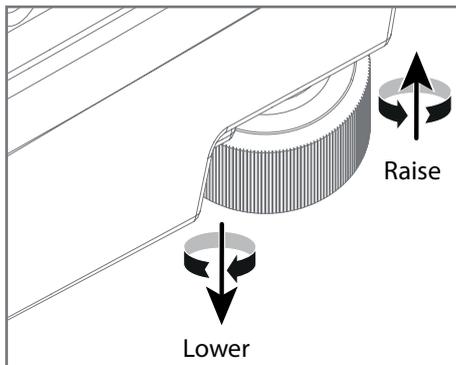


Image 4-4

### Mounting to a ceiling

1. Install the projector in to an approved rigging frame.
2. Install the rigging frame to the desired location.
3. Power up the projector.
4. Go to *Main Menu / Installation / Orientation* and select the correct orientation for your setup. See "Orientation", page 45 for more information.
5. Go to *Main Menu / Test Patterns* and select an internal hatch pattern to display on the screen.
6. Adjust the position (height and angle) of the rigging frame until the projected hatch pattern is a level and perfect rectangle.

## 4.6 Throw distance

### Calculate the installation throw distance

Throw is the distance (D) measured from your projector lens to the screen. To calculate the throw distance for an installation, you will need two pieces of data: the selected lens throw ratio (L) and the horizontal width (W) of the screen. For example, if the screen width (W) is 2.4 meters and the projector lens has a throw ratio (L) of 0.99:1, then the throw distance (D) will be 2.38 meters.

Calculation:  $2.4 \times 0.99 = 2.38$

The following graphs illustrate the image size (W) and projection distance (D) for each of the projector lenses.



Tolerances are typically +/- 5% due to optical (lens) variation.

Throw distance, FLD WUXGA

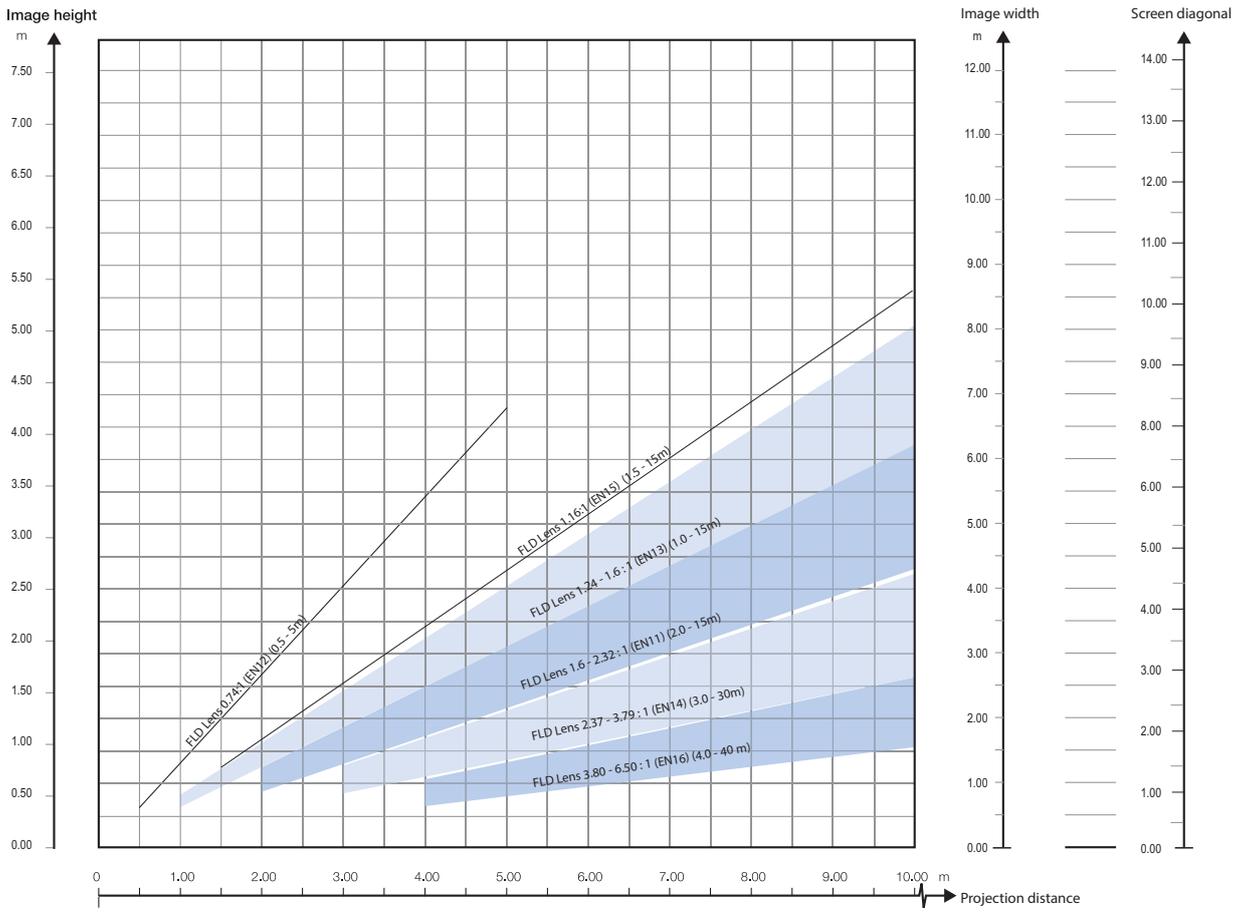


Image 4-5

Throw distance, FLD+ WQXGA

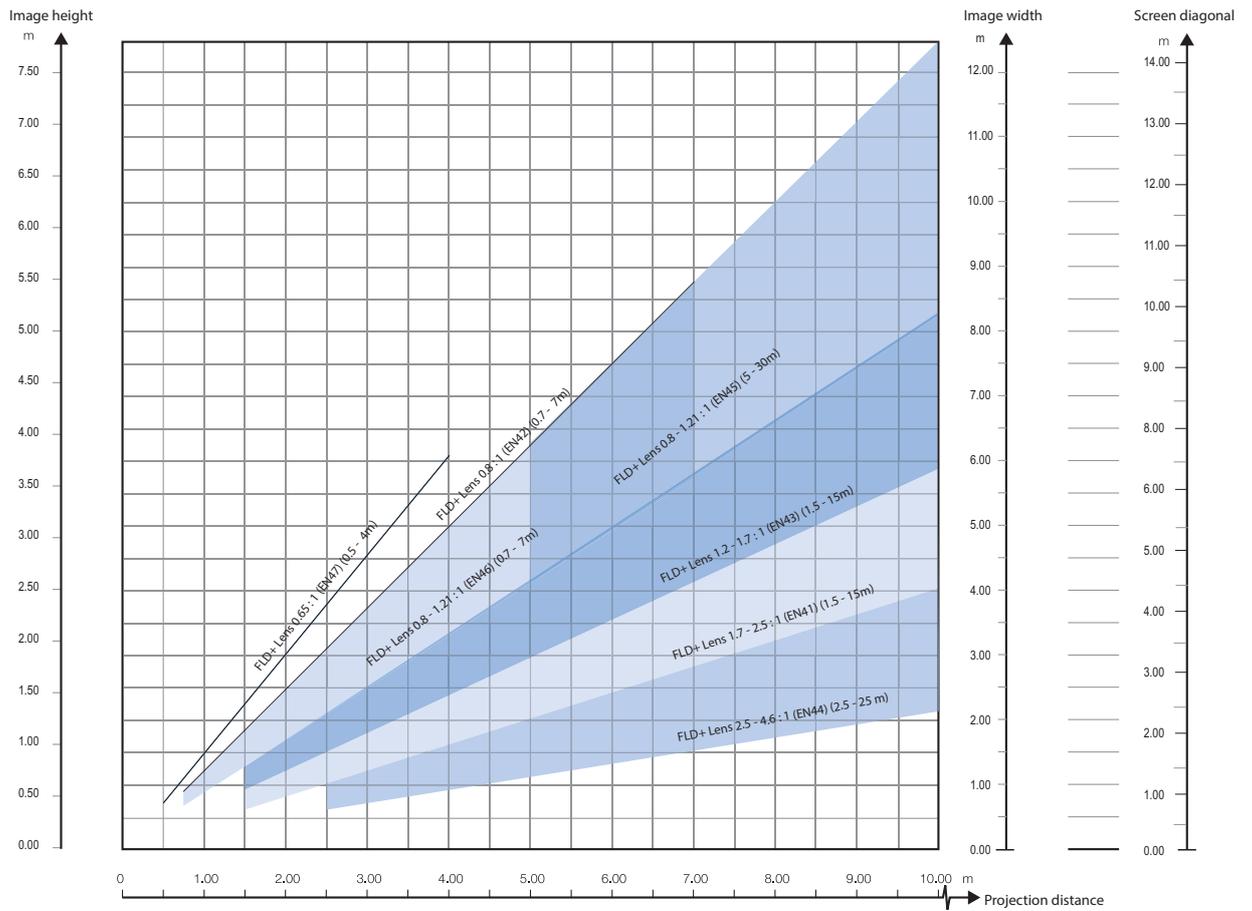


Image 4-6

Throw distance, FLD+ WUXGA

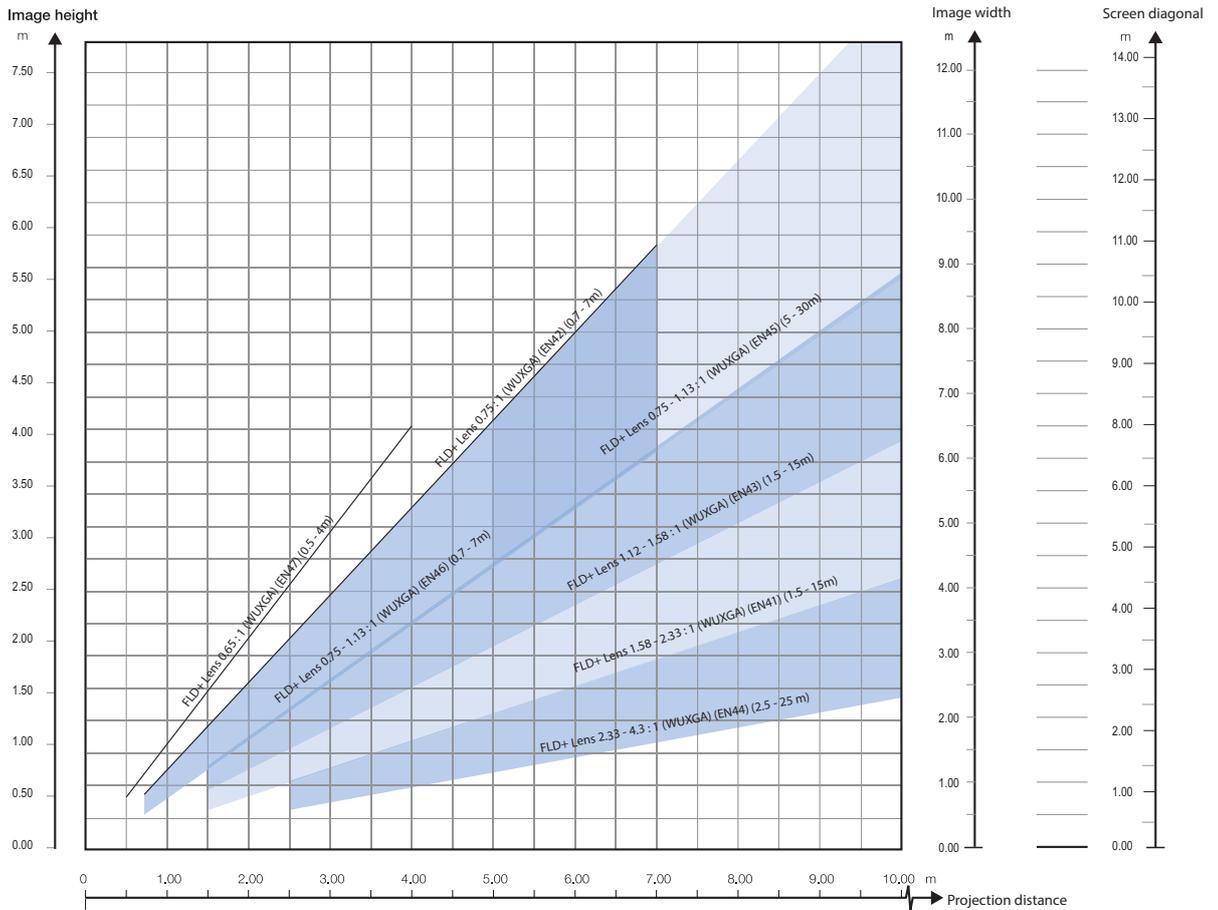


Image 4-7

4.7 Scheimpflug (Boresight) adjustment

What is Scheimpflug?

The lens holder has to be adjusted so that the “sharp focus plane” of the projected image falls together with the plane of the screen (Fp1→Fp2). This is achieved by changing the distance between the DMD plane and the lens plane (Lp1→Lp2). The closer the lens plane comes to the DMD plane the further the sharp focus plane will be. It can occur that you won't be able to get a complete focused image on the screen due to a tilt (or swing) of the lens plane with respect to the DMD plane. This is also known as Scheimpflug's law. To solve this the lens plane must be placed parallel with the DMD plane. This can be achieved by turning the lens holder to remove the tilt (or swing) between lens plane and DMD plane (Lp3→Lp4).

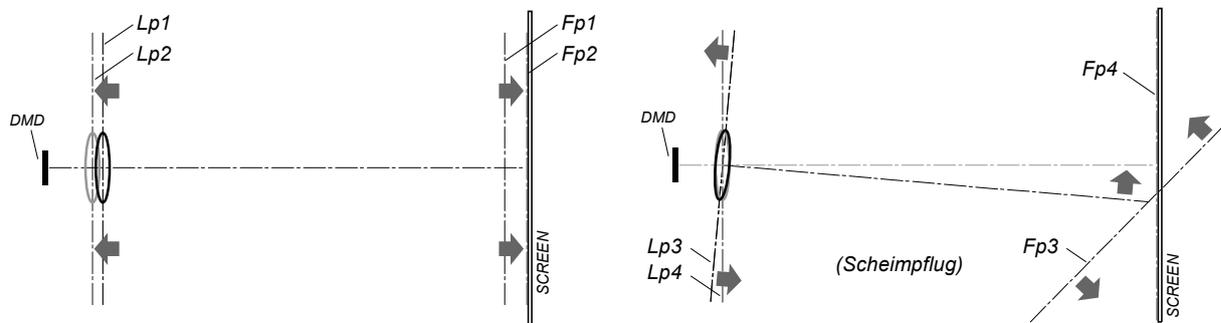


Image 4-8  
Scheimpflug principle



### Scheimpflug principle

The "plane of sharp focus" can be changed so that any plane can be brought into sharp focus. When the DMD plane and lens plane are parallel, the plane of sharp focus will also be parallel to these two planes. If, however, the lens plane is tilted with respect to the DMD plane, the plane of sharp focus will also be tilted according to geometrical and optical properties. The DMD plane, the principal lens plane and the sharp focus plane will intersect in a line below the projector for downward lens tilt.

### Scheimpflug adjustment points

Scheimpflug adjustment points are located on the lens mount. The F90 has three (3) set screws and three (3) adjustment screws.

### When to apply Scheimpflug?



**Scheimpflug correction procedures may only be carried out by suitably trained and experienced technicians.**

A Scheimpflug correction should only be applied when the overall focus of the projected image is not equally sharp (for example, if the projector is **NOT in parallel** with the screen or as a result of a previously misaligned Scheimpflug). Be aware that the consequence of applying Scheimpflug correction upon a screen not in parallel with the projector is that the projected image differs from the rectangle shaped image. In other words "distortion" of the projected image occurs. **Masking** will be required to solve the distortion.

The disadvantage of Masking is loss of content. Therefore it is **strongly recommended** to place the projector **in parallel** with the projection screen and use the **SHIFT** functionality of the Lens Holder to match the projected image with the projection screen. If the SHIFT range is not sufficient then the projector can be tilted and Scheimpflug can be applied.

## 4.8 Scheimpflug adjustment procedure



**CAUTION: A Scheimpflug adjustment should only be carried out by properly qualified and experienced projection specialists. A poor Scheimpflug adjustment may result in an extremely degraded image and will require factory—servicing to the projector.**

### Necessary tools

- Allen key, hex size 4
- Allen key, hex size 6

### Preparation

1. Prepare the test area. Barco recommends a projector-screen distance of 2 metres be used for all Scheimpflug adjustments. Verify that the throw ratio of the installed lens matches the requirements of the installation area (projection distance and screen size).
2. Check that the lens is correctly installed, and lens shift is in centre position.
3. If the installed lens has Iris control, open the Iris all the way up.
4. Open the focus ring all the way up.
5. Go to Main Menu / Test Patterns / Full Screen and select to display the Focus test pattern.
6. Zoom the lens to its widest opening (maximum image size on the screen).

### Apply a Scheimpflug correction

1. Loosen the three set screws (reference 1b, 2b, 3b). Use a size 6 hex key to do this. (image 4-9)
2. Adjust the left side Scheimpflug adjustment screw (reference 1) until the test image in the top right side of the screen is in focus. Use a size 4 hex key to do this. (image 4-10)  
**Note:** This process may cause the other areas of the image to slide out of focus. This is totally normal.
3. Adjust the right side Scheimpflug adjustment screw (reference 2) until the test image in the top left side of the screen is in focus. Use a size 4 hex key to do this. (image 4-11)  
**Note:** This process may cause the other areas of the image to slide out of focus. This is totally normal.
4. Adjust the top Scheimpflug adjustment screw (reference 3) until the test image in the bottom half of the screen is in focus. Use a size 4 hex key to do this. (image 4-12)  
**Note:** This process may cause the other areas of the image to slide out of focus. This is totally normal.
5. Continue adjusting the screws one at a time until the test image is uniformly sharp across all areas of the display.

#### 4. Physical installation

6. Test the focus by zooming out (minimum image size on screen) and then zooming in again. Verify the image is still sharp. If there are any deviations to sharpness, repeat steps 2 to 6 until the image is correct.
7. Tighten the three set screws in the following order: left (1b), right (2b) and then top (3b). Use a size 6 hex key to do this.

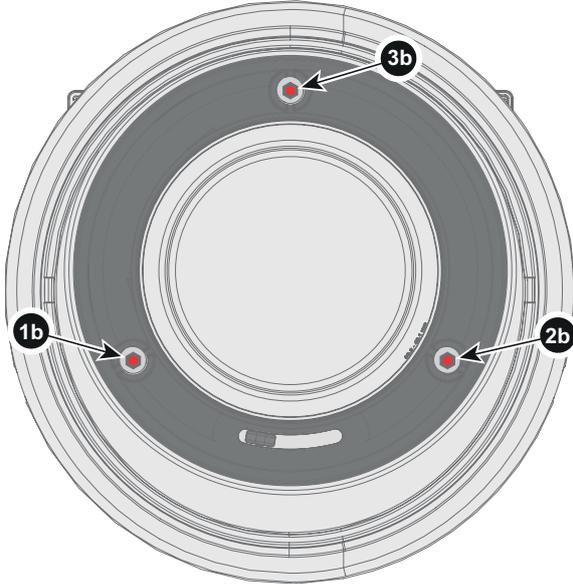


Image 4-9

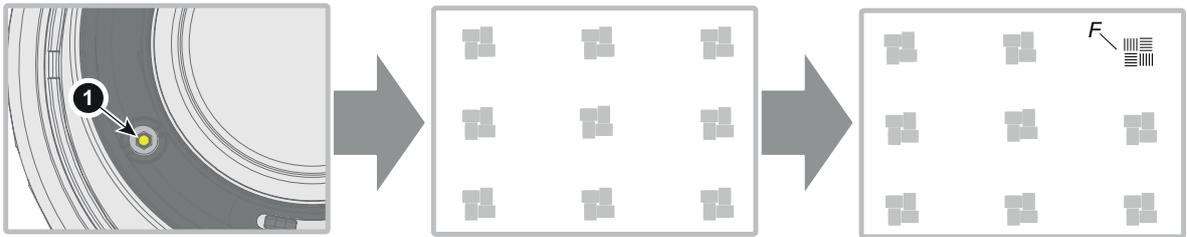


Image 4-10

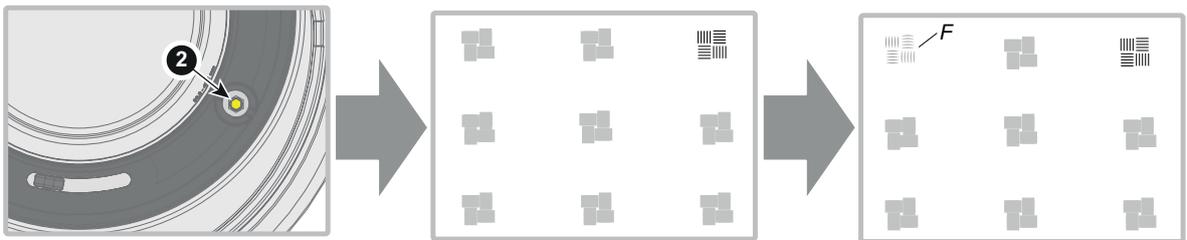


Image 4-11

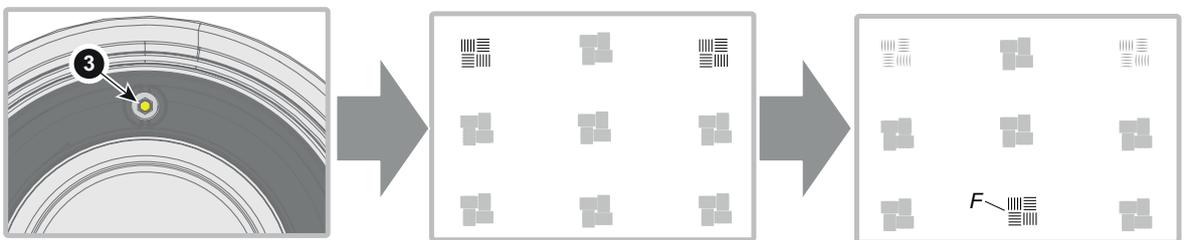


Image 4-12

## 5. GETTING STARTED

### About this chapter

This chapter describes how to set up and optimize your projector setup when the physical installation process is complete.

### Overview

- Projector source and control connections
- Power up the projector
- Power down the projector
- Power modes
- Customize projector settings
- User interface

## 5.1 Projector source and control connections

### Overview

- Making connections
- Connector specifications
- Control interfaces

### 5.1.1 Making connections



The source switching time varies from 0.5 to 5 seconds.

### Source signal connectivity

The connector panel at the back of the projector is used for all source connections.

Source signal connectivity on the projector is:

- 2x Dual Link DVI-I (DVI-D functionality)
- 2x DisplayPort 1.2
- 1x HDMI 1.4 (No 3D functionality)
- 1x HDBaseT w/Ethernet
- 2x 3G SDI

### 5.1.2 Connector specifications

#### Overview

- Single link DVI
- Display Port 1.2
- HDMI 1.4 (No 3D functionality)
- 3G-SDI
- HDBase T

#### 5.1.2.1 Single link DVI

#### Specifications

Parameter	Value
Connector	DVI-I female digital RGB
Signal characteristics	DVI 1.0, Digital, TMDS
Max. cable length	25 m (24 AWG)

## 5. Getting started

Parameter	Value
Max. pixel rate	330 MHz (dual link), 165 Mhz (single link)
Scan format	Interlaced or progressive
Max. input data resolution	1920x1200 (Single link),
Bit depth	8 bit
EDID	Supported
HDCP	Not supported

### 5.1.2.2 Display Port 1.2

#### Specifications

Parameter	Value
Connector	Standard Display port
Signal characteristics	DP 1.2
Functionality	Mandatory
3D formats supported	Frame field sequential, Frame stacked, Side by side
Max. cable length	15 m (24 AWG) - RBR; 2 m (24 AWG) – HBR1, HBR2
Scan format	Interlaced or progressive
Max. input data resolution	1920x1200 @60Hz (WUXGA 60Hz)
Bit depth	8bit
EDID	Supported
HDCP	Not Supported

### 5.1.2.3 HDMI 1.4 (No 3D functionality)

#### Specifications

Parameter	Value
Connector	Standard HDMI
Signal characteristics	Digital, TMDS
Max. cable length	15 m (24 AWG)
Max. pixel rate	594MHz
Scan format	Interlaced or progressive
Max. input data resolution	1920x1200 @60Hz (WUXGA 60Hz)
Bit depth	8 bits
EDID	Supported
HDCP	Not Supported
Ethernet	No
Audio return	No

### 5.1.2.4 3G-SDI

#### Specifications

Parameter	Value
Standard	SMPTE 424M-2006 10bit level A
Connectors	2x) BNC 75 ohm type IEC 60169-8, Amendment 2 1997, A
Bandwidth	>3 GHz

Parameter	Value
Return loss	>10dB at 3GHz
Impedance	75 ohm resistive

### 5.1.2.5 HDBase T

#### Specifications

Parameter	Value
Reference specification	HDBaseT 1.0 Specification, June 2010
Connector	Standard RJ-45, 8P8C
Signal characteristics	HDBaseT
Max. cable length (1080p/48b/60Hz)	100 m (Cat5e/6), Pixel Clock <=225MHz, Video Datarate <=5.3Gbps 70 m (Cat5e/6), Pixel Clock >225MHz, Video Datarate >5.3Gbps 100 m (Cat6a/7), Pixel Clock >225MHz, Video Datarate >5.3Gbps
Max TMDS Clock Frequency	270 MHz
Max video resolution supported	1920x1200 @60Hz (WUXGA 60Hz)
HDCP Pass-Through	Yes, from Source to Projector
CEC Pass-Through	Yes, from Source to Projector
IR Extension	Not Supported
RS-232 Extension	Not Supported
10/100Mbps Ethernet Pass-Through	Not Supported
Fallback to 100BaseTx, IEEE 802.3u	Not Supported
USB Over Centre Tap	Not Supported
Power Over Ethernet	Not Supported
Audio	Not Supported
LEDs - HD Base Status	Operation: Green, Left Link/Mode: Yellow, Right

### 5.1.3 Control interfaces

#### About

The following control interfaces are available on the projector:

- 1x RS-232 (for projector control)
- 1x LAN/Ethernet (for projector control)
- 3x USB-A ports

#### Overview

- RS-232
- LAN/Ethernet
- USB-A port

#### 5.1.3.1 RS-232

##### Specifications

Parameter	Value
RS-232 connector	1 female DB9 connector (RS232-in) for projector control and debug

### 5.1.3.2 LAN/Ethernet

#### Specifications

Parameter	Value
Ethernet connector	1 RJ45 Connector for projector control (not content)
Protocols	DHCP, TCP/IP, UDP/P
Speed	10/100 Mbit/1000Mbit

### 5.1.3.3 USB-A port

#### Specifications

Parameter	Value
USB connector	Type A
Function	Firmware upgrade using USB sticks
Power	Power 5V, max 1,5A (out)
Standard	USB 2.0

## 5.2 Power up the projector

---



**CAUTION:** Sources should always be connected before the projector is powered up



**CAUTION:** Use only power cords following the unit, designed for your projector model. Do not use unauthorized replacements. Do not use power cords which are damaged.

### Power up the projector using the keypad or remote

1. Connect the line cord to the projector.
2. Plug the 3-pronged cord into a grounded AC outlet.  
The projector will begin warming up.
3. Press the power button on the keypad or remote to bring the projector up to standby mode.  
The power button backlight on the keypad will flash blue while the projector is warming up.
4. When the power button backlight is steady blue, the projector is ready for use.

## 5.3 Power down the projector

---

### Power down using the keypad or remote

1. Depress and hold the power button on the keypad or remote for three (3) seconds.
2. When the projector panel is no longer illuminated, remove the mains power cord from the projector.

## 5.4 Power modes

---

### General

The table below details the F90 power modes.

Mode	Description
Normal	Projector is booted up and the light source is on

Mode	Description
Ready	Projector is booted up but the light source is off
ECO Standby	Light source is switched off and projector electronics are powered down

## 5.5 Customize projector settings

### About

The projector display, behavior and user interface can be adjusted to meet individual requirements.

Options include:

- Adjust the OSD menu color

## 5.6 User interface

### Overview

- On Screen Display (OSD)

### 5.6.1 On Screen Display (OSD)

#### About

The projector on screen display (OSD) is the primary user interface (UI). From here, you can review and adjust all projector and display settings.

The OSD interface uses tabs to display the main menu. Topics are then further sorted and displayed by function: main (topic) — sub (function) — sub (function).

There are six main menu tabs: Source, Image, Installation, System settings, Test pattern and Status.

#### User access levels

The projector's software platform uses access levels to define what each user can do.

There are two user access levels: Standard User and Power User. In addition, there is a Service user access for certified Service personnel.

A standard user has access to all projector functionality and OSD menu items. A power user has, in addition to access to all projector functionality and OSD menu items, access to a number of advanced functions. Access to power user features is password-protected. Contact your projector supplier for more information.

#### Navigation

You can navigate the OSD using the local keypad.

Press the MENU button to display the OSD.

Use the arrow keys to navigate left, right, up and down.

Press the OK button to select a menu topic and get more options.

Use the numeral keys to enter values, or use the arrow keys to move the barscale up or down.

Press MENU again to exit the menu system.

Press the OSD button to deactivate the OSD on the screen. Only critical warnings will be displayed.



**Some menu options are reserved for Power or Service Users; these will be grayed out and not available for selection when in standard user mode. To access these features, enter your Power or Service Code in the Service Menu or contact your support representative for more information.**

#### Define values

Menu settings are displayed using checkboxes, barscale sliders, and drop-down lists.

To set a value:

## 5. Getting started

---

- Press OK to select or deselect a checkbox (turn a function ON or OFF).
- Use the arrow keys to move the barscale slider up or down on the value line. For a barscale 0-9, each step will equal 10% of the total value.
- To enter the value as a direct number, press ENTER, input the digit(s), and then Press ENTER again to execute and exit cursor mode e.g. ENTER 79 ENTER.

Changes to values are implemented dynamically.

### **Menu memory**

The OSD menu remembers the last selected sub-item as long as the projector is running. The menu memory is reset when restarting the projector from standby.

---

## 6. SOURCE MENU

### About the Source menu

This menu is used to select, review and configure sources into the projector.

### Overview

- Connector selection
- Source configure

---

### 6.1 Connector selection

#### About

*Source / {Source}*

Click on the relevant input connector icon to swap or activate the source.

The icon for the active source is highlighted.

The list of displayed sources can be adjusted to include other connectors.

The default selection of connectors displayed is:

- DVI 1
- DVI 2
- DP 1
- DP 2
- HDBaseT
- HDMI
- SDI

---

### 6.2 Source configure

#### About

*Source / Configure*

This submenu allows users to review and configure advanced source settings.

*Source / Configure / Edit source*

The **Edit source** submenu enables configuration of source composition.



**Edit Source will be available for future SW upgrade.**

---

The connectors can be arranged in 5 different compositions:

- Single
- Side-by-side
- Top-bottom
- 2x2 window
- 4 columns

Additional logical inputs can be added.

The default selection of connectors displayed is:

## 6. Source menu

---

- DVI 1
- DVI 2
- DP 1
- DP 2
- HDBaseT
- HDMI
- SDI

---

## 7. IMAGE MENU

### Overview

- Contrast
- Brightness
- Saturation
- Advanced image adjustments

---

### 7.1 Contrast

#### About

*Image / Contrast*

Used to adjust the contrast ratio of the displayed image by applying gain to the red, green and blue signals.

Available range: 0.00 to 2.00

Default value: 1.00

---

### 7.2 Brightness

#### About

*Image / Brightness*

The brightness function is used to adjust the black level in the input picture. It adds or subtracts an offset, or bias in to the red, green and blue signals.

Available range: -1.00 to 1.00

Default value: 0.00

---

### 7.3 Saturation

#### About

*Image / Saturation*

Saturation levels impact on the white levels and the intensity of the color display; the higher the value, the more vivid the color display will be.

Available range: -1.00 to 1.00

Default value: 0.00

---

### 7.4 Advanced image adjustments

#### About

*Image / Advanced*

Advanced image adjustment settings that enable greater control, particularly during calibration.



**Not all settings are available for all source types. Settings that are not available for the active source will be grayed out and not available for selection.**

---

#### P7 RealColor

Advanced functionality for color management.

*Image / Advanced / P7 RealColor* → White point

## 7. Image menu

---

Select how to adjust the white point. There are two alternatives: temperature and coordinate.

Temperature	The white point is specified on a Kelvin scale between 3200K – 13000K tracking along the black body curve.
Coordinate	Coordinate: The white point is specified using an x,y coordinate in the CIE 1931 Chart.

### Color mode

*Image / Advanced / P7 RealColor —>Color Mode*

Used to set the coordinates for color processing mode: RGB, RGBCMY, White.

RGB	Red, Green and Blue are moved according to the specified desired coordinates. Cyan, Magenta and Yellow are calculated accordingly.
RGBCMY	Red, Green, Blue, Cyan, Magenta and Yellow are moved according to the specified desired coordinates.
White	White point only. No changes to RGBCMY. Default: White
Native	Native Colors. (Color Correction Off).

### Native values

*System Setting/ Service / Color —>Measured values*

The current measured values (WRGB ) used for RealColor processing.

These values must be accurate for RealColor to perform correctly.

Current values are presented in the color gamut diagram. Measured values are represented by a solid line.

Default: values measured at the manufacturers facility.

### Custom values

*Image / Advanced / P7 RealColor —>Desired values*

Allows users to specify red, green blue, cyan, magenta and yellow color coordinates (x,y) and gain.

Default: REC 709 color points.

Current values are presented in the color gamut diagram. Desired values are represented by a dotted line.

---

## 8. INSTALLATION MENU

### Overview

- Lens
- Orientation
- Warp
- Illumination

---

### 8.1 Lens

#### About

*Installation / Lens*

Manage lens functions: focus, zoom, shift, shutter, and iris.

All changes occur dynamically.

#### Focus and zoom

*Installation / Lens / Zoom*

Use the navigational arrows, up and down, to adjust zoom.

Use the navigational arrows, left and right, to adjust focus.

#### Shift

*Installation / Lens / Shift*

Use the left, right, up and down navigational arrows to adjust the lens shift in four directions.

---

### 8.2 Orientation

#### About

*Installation / Orientation*

Rotate the image on the imaging device in table or ceiling and front or rear.

There are four options, as illustrated below: table / front, table / rear, ceiling / front, ceiling / rear.

Default: Table Front.

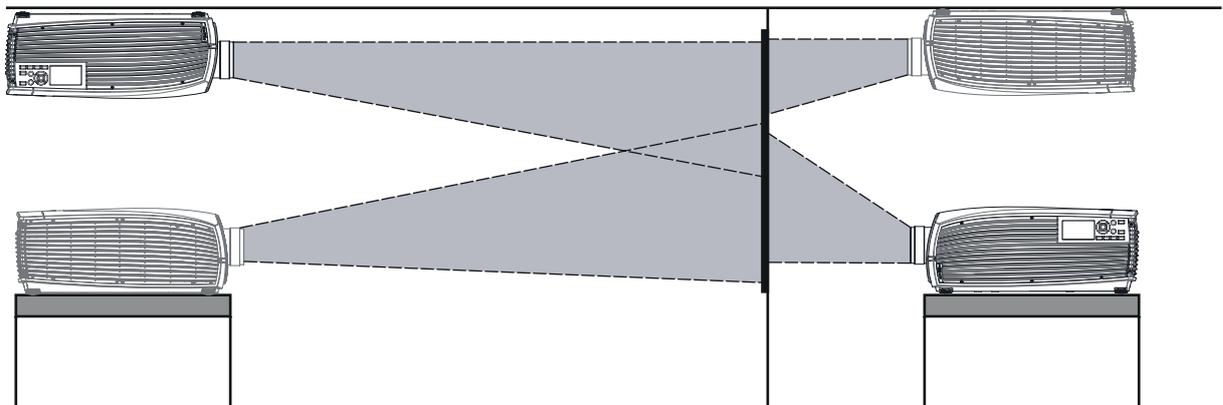


Image 8-1

## 8.3 Warp

---

### About

Image warping is the process of digitally manipulating an image to compensate for the distortion of the screen. Consequently, it can also be used to generate an image with irregular shape, as illustrated in image 8-2 and image 8-3.

While an image can be transformed in various ways, pure warping doesn't affect the colors.



Image 8-2



Image 8-3

### 4 corners adjustment

#### *Installation / Warp / 4 Corners Adjustment*

Basically, this type of warping adjusts each of the four image corners in the X and Y direction, if you have a typical trapezoid picture of the screen.

To have a successful Warp correction, the size of the screen must be entered. The size are expressed in the X and Y measured values, independent of the term of the measurement. (mm, inches, yards or whatever), but must be expressed in whole numbers without decimals. This means that the accuracy are higher when given in mm than in inches. The projector then calculate the aspect ratio.

All four corners can be adjusted and the image correction is calculated accordingly using perspective algorithm. This can be used for keystone correction.

Use the navigational arrows to adjust the image.

Changes occur dynamically to the image display.

## 8.4 Illumination

---

### About

#### *Installation / Illumination*

Review light source status and adjust (dim) laser power from 0 to 100%.

Default: 100%

## 9. SETTINGS MENU

### Overview

- Communication
- Apply a menu theme
- Service

### 9.1 Communication

#### About

*System settings / Communication*

Current Ethernet communication information is given, and can be edited in this menu.

Default mode for Ethernet communications are: Automatic ON / IP Version 4 DHCP mode.

Setting	Description
<b>Automatic</b>	
ON	DHCP enabled
OFF	Static
<b>IP version 4</b>	
Static mode	Set address, subnet masks and default gateway according to network specification.
DHCP mode	Assigned IP address, subnet mask and gateway.

### 9.2 Apply a menu theme

#### About

*System settings / Themes*

Themes are used to apply a predefined functionality to the OSD display. There are two options: light (default) or dark.

### 9.3 Service

#### About

*System settings / Service*

The Service Menu is for service personnel and / or advanced users only.

The menu is password protected.



---

# 10. STATUS MENU

## Overview

- Source status
- Product
- Illumination
- Communication

---

## 10.1 Source status

### About

*Status / Source*

Displays active source information:



**This is a status menu only. No changes can be made to settings from this menu.**

---

---

## 10.2 Product

### About

*Status / Product*

Displays active product information:

Article number: Projector article / part number

Serial number: Projector serial number

Firmware: Projector software package version

Model name: Projector model name



**This is a status menu only. No changes can be made to settings from this menu.**

---

---

## 10.3 Illumination

### About

*Status / Illumination*

Shows the current laser power (%) and laser runtime.



**This is a status menu only. No changes can be made to settings from this menu.**

---

---

## 10.4 Communication

### About

*Status / Communication*

## 10. *Status menu*

---

Lists the projector IP address.

# 11. RESET MENU

## Overview

- Factory Reset
- Selectable Reset

## 11.1 Factory Reset

---

### Reset

Enter Reset menu, Select Factory Reset, and confirm. This will turn back all settings to factory standard.

## 11.2 Selectable Reset

---

### Reset

Enter the Reset Menu, Select the items to be reset, and Confirm. This will turn the selected items to factory standard.



---

## 12. CLEANING THE PROJECTOR

---

### 12.1 Projector lenses

#### General guidelines for cleaning projector lenses

Blow off dust with clean compressed air (or pressurized air cans) .

Use lens cleaner and a clean lens cleaning cloth to remove the dust and contamination.

Wipe in broad strokes, in one direction only.

Warning: Do not wipe back and forwards across the lens surface as this tends to grind dirt into the coating.

Use a dry clean lens cleaning cloth to remove left liquid or stripes. Polish with small circles.

If there are still fingerprints on the surface, repeat with lens cleaner and a clean lens cleaning cloth, then polish again with a dry cloth.



If smears occur when cleaning lenses, replace the cloth. Smears are the first indication of a dirty cloth.

---

### 12.2 Projector cabinet



**WARNING:** Always disconnect the projector from the mains power net before attempting to clean the projector cabinet.

---

#### General guidelines for cleaning the projector cabinet (exterior only)

Clean the housing of the projector with a damp cloth. Stubborn stains may be removed with a cloth lightly dampened with a mild detergent solution.

### 12.3 Filters

#### General guidelines for cleaning projector filters (external)

Remove the filter from the projector then use a vacuum to remove excess dust from the filter. Do not wet or soak the filter.



Cleaning of the projector filter should be done in a separate room to avoid dust contamination.

---